
# ce Var

IOHEAHEITS-VORKEHRUNGEN

... DEMONTAGE-ANLEITUNGEN

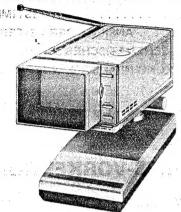

TC-30G/TC-30

12V Gleichspannung

VHF 2 - 12

UHF 21 - 69

Ton-Ausgang

62 Transistoren

Video

Ton

Farbe

12 IS

(Gleichspannung) 9,5 W

Wechselspannung 220V/240V, 50 Hz

CCIR-Norm/PAL Farbkodierung B.G

Ton-Eingang ca. 300mV

38,9 MHz

56 Dioden Aviograff riffering family

85XB22, 6,6 cm Diagonale,

11,9 kV bei Nullstrahlstrom Hierog 3

40° Ablenkung, Dot In-Line-Bildröhre

250mW asythmet velvoo rest ends

4,6 cm, 16Ω , rund

Automatische Scharfabstimmung (AFC)

Automatische Strahlstrombegrenzung

Phasenregelung, Zeilenfrequenzregelung,

Rauschunterdrückung, Entmagnetisierung

B+ Line

Automatische Farbregelung (ACC) Automatische Frequenz und autolic

Automatische Verstärkungsregelung

8,6 cm

11.5 cm

24,3 cm

(nur Wechselstrom)

Automatische Verstärkungsregelung (AGC)

ca, 200mV

32,9 MHz/33,4 MHz

34,47 MHz; ap 152 house

Total des VI ent negliv

75Ω asymmetrischer Koaxialtyp

Video-Eingang 1,0Vs-s/75Ω

Video-Ausgang 1,0Vs-s/75Ω

(Wechselspannung) 19 W (Netzteil ca. 1W)

X-30 chassis

#### Specifications

Power Source:

Colour TV 12V DC

Power Consumption:

AC Adaptor 220V/240V, AC 50 Hz (AC) 19 W (AC Adaptor approx. 1 W)

(DC) 9.5 W :-

Aerial Impedance:

75Ω Unbalanced Coaxial Type

TV System:

PAL B.G.I

Receiving Channels: ang<u>ekile</u> pasasalan VHF ch. 2-12 UHF ch. 21 - 69

Connecting Terminals:

1.0Vp-p/75Ω VIDEO IN

VIDEO OUT inalietzurrealeiz fei

1.0Vp-p/75Ω

AUDIO IN

AUDIO OUT Approx. 200mV

Approx. 300mV 6064 3

Intermediate Frequency

38.9 MHz

Sound

32.9 MHz/33.4 MHz

Semiconductors:

Colour

12 ICs

der Chassic-Massa der

High Voltage: eib na

Picture Tube:

85XB22, 2,6 inches measured diagonal

se unschlicitent dedo

Audio Output:sizasbi W

Speaker: Automatic Control

าด Circuits:o∑ วิตาธตูก

# der Netzkabelstecker

Automatic Gain Control

sind verhanden, wenn

Control

e Inbetriebnehme des

Automatic Voltage Regulator Dimensions: helph neight ess 8.6 cm or im paupios

durch Personal mo 2.11 ht vittbW., die nicht in vollem ngerm!) misd negguard Depth: 24.3 cm Net Weight: 15 kg stad across and time gnafmU

mit Hochspannungsgeräten vertraut sind. Specifications are subject to change without notice.

immer an das Emptängerchassis zu entledem

#### Technische Daten

Empfänger:

Netzteil:

Leistungsaufnahme:

Antennenimpedanz:

Fernsehsystem:

Empfangskanäle:

TRITE !! 1/2 6

Hochspannung:

Tonausgangsleistung:

Automatische

Abmessungen:

Lautsprecher:

16 Schaltkreise: 100 100

doing no unlighow hashe

sharge the anode of the

sals before nancting the

Anschlußbuchsen, Pegel

und Impedanz: to still - dominion

Halbleiter:

Bildröhre:

Zwischenfrequenz:

34.47 MHz

62 Transistors

56 Diode harmant 8 toll our

11.9 kV at zero beam current modern

-40° deflection Dot In-Line

250mWan name effice poutied

4.6 cm, 16Ω, Round Type

Automatic Frequency Control nneW .C

Automatic Beam Current Limiter Automatic Colour Control 3/4 190 8US

Automatic Frequency and Phase 2603 6

dieser Fernseher in SAA latnozine Fernsehers onne aufgellenden vand bringt die Gefahr nevmont? renselver Fernselver (AC only) anie

Tiefe Gewicht: अवस्तार किस लाग 1,5 kg Minimaler Widerstand

provisio 1 48 Änderungen der technischen Daten vorbehalten.

Höhe

Breite

Matsushita Electric Trading Co., Ltd. P.O. Box 288, Central Osaka Japan

#### CONTENTS

90

SAFETY PRECAUTIONS	ERHEITS-VORKEHRUNGEN
DISASSEMBLY INSTRUCTIONS 5	EMONTAGE ANI EITHNGEN
ADJUSTMENT	ABSTIMMUNGEN
CONDUCTOR VIEWS	ICHT DER LEITERBAHNEN
SCHEMATIC DIAGRAM	· · · · · · · · · · · · · · · · · · ·
EXPLODED VIEWS	
	ANORDNUNG
REPLACEMENT PARTS LIST	

#### SAFETY PRECAUTIONS

#### **GENERAL GUIDELINES**

- It is advisable to insert an isolation transformer in the power line and AC supply before servicing a hot chassis.
- When servicing, observe the original lead dress, especially
  the lead dress in the high voltage circuits. If a short
  circuit is found, replace all parts which have been
  overheated or damaged by the short circuit.
- After servicing, see to it that all the protective devices such as insulation barriers, insulation papers, shields, and isolation R-C combinations, are properly installed.
- 4. Before turning the receiver on, measure the resistance between B+ line and chassis ground. Connect — side of an ohmmeter to the B+ lines, and + side to chassis ground. Each line should have more resistance than specified, as follows.
- When the TV set is not to be used for a long period of time, unplug the power cord from the AC outlet.
- 6. Potentials, as high as 11.9 kV, are present when this receiver is in operation. Operation the receiver without the rear cover involves the danger of a shock hazard from the receiver power supply. Servicing should not be attempted by anyone who is not thoroughly familiar with the precautions necessary when working on high voltage equipment. Always discharge the anode of the picture tube to the receiver chassis before handling the tube.

B+ Line	Minimum Resistance
B+ Leitung	Minimaler Widerstand
11V	110Ω

#### SICHERHEITS-VORKEHRUNGEN

#### ALLGEMEINE RICHTLINIEN

- Es ist empfehlenswert, einen Trennungstransformator in die Stromversorgung zwischenzuschalten, bevor Reparaturen an einem Gerät vorgenommen werden, dessen Chassis unter Spannung steht.
- Bei der Durchführung von Servicearbeiten dürfen die ursprünglichen Kabelanschlüsse nicht vertauscht werden, dies gilt insbesondere für die Anschlüsse im Hochspannungsteil. Hat sich ein Kurzschluß ereignet, dann sind alle Teile, an denen Spuren von Überhitzung sichtbar sind, auszuwechseln.
- Nach Beenden der Servicearbeiten ist sicherzustellen, daß alle Sicherheitsvorrichtungen, wie Isolationsstege, Isolationspapiere, Abschirmungen und Isolations-R-C-Glieder wieder richtig eingesetzt sind.
- 4. Vor dem Einschalten des Fernsehers ist der Widerstand zwischen der B+-Leitungen und der Chassis-Masse zu prüfen. Die — -Seite des Ohmmeters an die B+-Leitung, und die + -Seite an die Chassis-Masse anschließen. Jede Leitung sollte einen größeren Widerstand als die vorgeschriebenen, links unten aufgeführten Werte haben.
- Wenn der Fernseher während längerer Zeit nicht in Betrieb gesetzt werden wird, sollte der Netzkabelstecker aus der Netzsteckdose gezogen werden.
- 6. Spannungen von bis zu 11,9 kV sind vorhanden, wenn dieser Fernseher in Betrieb ist. Die Inbetriebnahme des Fernsehers ohne aufgesetzte Rückwand bringt die Gefahr eines elektrischen Schlages von der Fernseher-Stromversorgung mit sich. Servicearbeiten sollten daher auch nie durch Personen versucht werden, die nicht in vollem Umfang mit den Sicherheitsvorkehrungen beim Umgang mit Hochspannungsgeräten vertraut sind. Vor der Handhabung der Bildröhre ist die Anode der Bildröhre immer an das Empfängerchassis zu entladen.

7. After servicing make the following leakage current checks to prevent the customer from being exposed to shock hazards.

### LEAKAGE CURRENT COLD CHECK

- 1. Unplug the AC cord and connect a jumper between the two prongs on the plug.
- 2. Turn on the receiver's power switch.

the chassis, the reading must be  $\infty$ .

3. Measure the resistance value, with an ohmmeter, between the jumpered AC plug and each exposed metallic cabinet part on the receiver, such as screwheads, antennas, control shafts, handle bracket, etc. When the exposed metallic part has a return path to the chassis, the reading should be between 490 k $\Omega$  and 5.2 M $\Omega$ . When the exposed metal does not have a return path to

#### LEAKAGE CURRENT HOT CHECK (See Fig. 1.)

- Plug the AC cord directly into the AC outlet. Do not use an isolation transformer for this check.
- 2. Connect a 2  $k\Omega$ , 10 watts resistor, in series with an exposed metallic part on the set and an earth such as a water pipe.
- Use an AC voltmeter, with 1000 ohms/volt or more sensitivity, to measure the potential across the resistor.
- Check each exposed metallic part, and measure the voltage at each point.
- Reverse the AC plug in the AC outlet and repeat each of the above measurements.
- 6. The potential at any point should not exceed 1.4 volts RMS. In case a measurement is outside of the limits specified, there is a possibility of a shock hazard, and the receiver should be repaired and rechecked before it is returned to the customer.

Operation, day its horizoness Synchronisonori des

 Nach Beenden der Servicearbeiten sind die folgenden Kriechstrom-Prüfungen durchzuführen, um den Kunden vor der Gefahr eines elektrischen Schlages zu schützen.


### MESSUNG DES KRIECHSTROMS IM ABGESCHALTETEN ZUSTAND

- Den Netzkabelstecker aus der Netzsteckdose ziehen und die beiden Steckerstifte kurzschließen.
- 2. Den Geräteschalter des Fernsehgerätes einschalten.
- 3. Mit einem Ohmmeter den Widerstandswert zwischen dem überbrückten Netzkabelstecker und jedem zugänglichen Metallteil am Gehäuse des Fernsehgerätes, wie Schraubenköpfe, Antennen, Achsen der Regler, Griffassungen usw. messen. Wenn ein zugängliches Metallteil eine Rückleitung zum Chassis hat, sollte die Anzeige zwischen 240kΩ und 5,2MΩ betragen.

Wenn ein zugängliches Metallteil keine Rückleitung zum Chassis hat, muß die Anzeige ∞ betragen.

### MESSUNG DES KRIECHSTROMS IM EINGESCHALTETEN ZUSTAND (Siehe Abb. 1)

- Den Netzkabelstecker direkt in eine Netzsteckdose einstecken. Für diese Messung keinen Trennungstransformator verwenden.
- 2. Einen  $2k\Omega$ -, 10-Watt-Widerstand in Serie an ein von außen zugängliches Metallteil am Fernsehgerät und eine guten Erdung, z.B. Wasserleitung, anschließen.
- Ein Wechselstrom-Voltmeter mit einem Meßbereich von 1000 Ohm/Volt oder größer verwenden, um die Spannung über den Widerstand zu messen.
- 4. Jedes zugängliche Metallteil prüfen, und an jedem Punkt die Spannung messen.
- 5. Den Netzkabelstecker umgekehrt in die Steckdose einstecken und jede der obigen Messungen wiederholen.
- 6. Die Spannung darf an keinem der Punkte 1,4V eff. überschreiten. Wird dieser Wert nicht eingehalten, besteht die Gefahr eines elektrischen Schlages, und das Fernsehgerät sollte daher repariert und nachgeprüft werden, bevor es an den Kunden zurückgegeben wird.

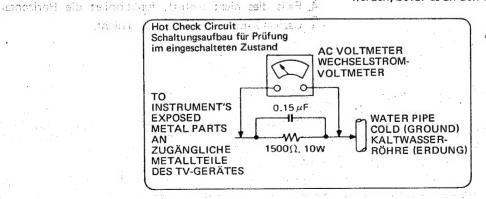

#15they zabliß

Fig. 1 Abb. 1

#### 7. Mach Beenden der Servicrerbeiten s NOTAIDAR-X

- WARNING: 1. The potential source of X-Radiation in TV

  section and the picture tube.
- 2. When using a picture tube test jig for service, ensure that jig is capable of handling 11.9 kV without causing X-Radiation.

NOTE: "It is important to use an accurate periodically necessive calibrated high voltage meter." The case of the control of the case of th

- 1. Turn the Brightness control fully counterclockwise.
- 2. Set the SERVICE switch to SERVICE. A martillensions
- 3. Measure the High Voltage. The meter reading should indicate 10.9 kV ± 1.0 kV. If the meter indication is cout of tolerance, immediate service and correction is required to prevent the possibility of premature component failure.
- To prevent an X-Radiation possibility, it is essential to use the specified picture tube.

AND THE WEST

#### HORIZONTAL OSC. DISABLE CIRCUIT TEST

This test must be made as a final check before the set is returned to the customer.

- With the rear cover removed, supply a nominal 220V (for TC-30U) or 240V (for TC-30G) AC to the set turn on the power switch.
- 2. Set the customer controls to normal operating positions.
- Short between T21 and T23 on the T-Board with a jumper wire.
  - Confirm that the picture falls out of horizontal sync.
- 4. If this does not occur, the horizontal oscillator disable circuit is not operating.
  - Follow instructions below for repair procedures before the set is returned to customer.

#### 7. After servicing make DNUHARTSCHAPOR

- ACHTUNG: 1. Potentielle Quellen von Roentgenstrahlung in Fernsehgeräten sind der Hochspannungsteil und die Bildröhre.
- 2. Bei 2. Verwendung 3 eines 3 Bildröhrenant naswed to Prüfgerüsts für den Service ist sicherzustellen, daß es für die Bewältigung von 11,9 kV geeignet ist, ohne daß Roentgenstrahlung

3. Neasure the resistance. And a verursacht wird. The resistance of the second of the

- 1.3 Den 3 Helligkeitsregler avollständig teintgegen 3 dem 3 Uhr-3 zeigersinn drehen, 2016 is sent stag billsrem besogne
- 2. Denti SERVICE-Schalter win indie ditSERVICE in Position or stellen. Edge is available application becomes edd and W
- Die Hochspannung messen. Die Anzeige des Meters sollte 10,9 kV ± 1,0 kV betragen. Falls die Anzeige diese Toleranzgrenzen überschreitet, ist sofortige Behebung nötig, um die Möglichkeit vorzeitigen Komponentenausfalls zu verhüten.
- 4. Um die Möglichkeit von Roentgenstrahlung zu verhindern, ist es wichtig, daß nur die vorgeschriebene Bildröhre verwendet wird.

#### PRÜFUNG DER HORIZONTAL-OSZILLATIONS-UNTERBRECHUNGS-SCHALTUNG

59 That to see that the contract of the second statement bounds,

Dieser Test muß als letzte Prüfung vor der Rückgabe des Gerätes an den Kunden durchgeführt werden.

- Bei abgenommener Geräterückseite ist dem Gerät Nennspannung 220V Wechselstrom (für TC-30U) oder 240V (für TC-30G) zuzuführen, und der Ein-/Aus-Schalter ist einzuschalten.
- 2. Die Bedienelemente in ihre normale Betriebsposition einstellen.
- 3. T21 an T23 auf der T-Platte mit einem Schaltdraht kurzschließen.
  - Überprüfen, daß die horizontale Synchronisation des Bildes verfällt.
- 4. Falls dies nicht eintritt, funktioniert die Horizontal-Oszillator-Blockierungsschaltung nicht.

SUBJECT SWELLOW DESCRIPTION OF THE PROPERTY OF

### **DISASSEMBLY INSTRUCTIONS**

#### REAR COVER REMOVAL

- 1. Remove 6 (A) screws shown in Fig. 2.
- 2. Remove the rear cover as shown in Fig. 2.

#### CABINET REMOVAL

- 1. Remove the rear cover.
- 2. Remove cabinet by lifting it upwards as shown in Fig. 3.

#### **BOTTOM CASE REMOVAL**

- 1. Place the television receiver upside down.
- 2. Remove the rear cover.
- 3. Remove the bottom case by lifting it upwards, as shown in Fig. 3.

#### TUNING BLOCK REMOVAL

1. Pull the tuning block after unlocking the holder pawls B shown in Fig. 4.

#### N, U AND B-BOARDS SERVICE POSITION

- 1. Remove the rear cover.
- 2. Remove the cabinet.
- 3. Unsolder the wire leads which is connected to A-Board shown in Fig. 5.
- 4. Flip down the N-Board as shown in Fig. 5.

#### A-BOARD SERVICE POSITION

- 1. Remove the bottom case.
- 2. Place the television receiver on work surface bottom side up shown in Fig. 6.

#### **DEMONTAGE-ANLEITUNGEN**

#### ENTFERNEN DER GERÄTERÜCKSEITE

- 1. 6 Schrauben (A) entfernen, wie in Abb. 2 gezeigt.
- 2. Die Geräterückseite entfernen, wie in Abb. 2 gezeigt.

#### ENTFERNEN DES GEHÄUSES

- 1. Die Geräterückseite entfernen.
- 2. Das Gehäuse zum Entfernen nach oben abheben, wie in Abb. 3 gezeigt.

#### ENTFERNEN DER BODENABDECKUNG

- 1. Den Fernsehempfänger auf den Kopf stellen.
- 2. Die Geräterückseite entfernen.
- 3. Die Bodenabdeckung zum Entfernen nach oben abheben. wie in Abb. 3 gezeigt.

#### ENTFERNEN DES TUNER-BLOCKES

1. Nach Lösen der in Abb. 4 gezeigten Sperrklinken (B), den Tuner-Block herausziehen.


#### SERVICE-STELLUNG DER N-, U- UND B-PLATTE


- 1. Die Geräterückseite entfernen.
- 2. Das Gehäuse entfernen.
- 3. Die in Abb. 5 gezeigten Anschlußdrähte, die an die A-Platte angeschlossen sind, loslöten.
- 4. Die N-Platte herunterklappen, wie in Abb. 5 gezeigt.

#### SERVICE-STELLUNG DER A-PLATTE

- 1. Die Bodenabdeckung entfernen.
- 2. Den Fernsehempfänger mit der Unterseite nach oben gerichtet auf die Arbeitsunterlage stellen, wie in Abb. 6



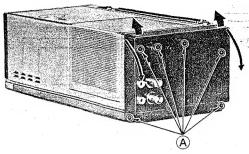

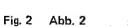



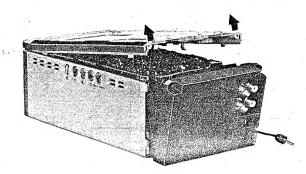


Fig. 3 Abb. 3

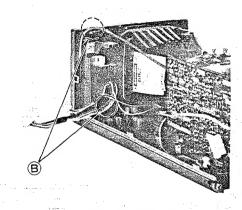


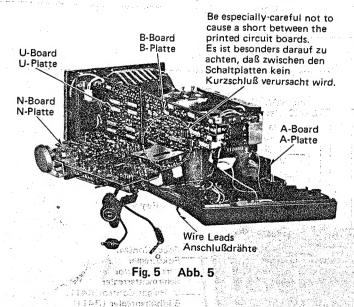

Be especially careful not to cause a short between the printed circuit boards. Es ist besonders darauf zu A-Board achten, daß zwischen den Schaltplatten kein Kurzschluß verursacht wird.

Fig. 6 Abb. 6

ratofever and appropriation

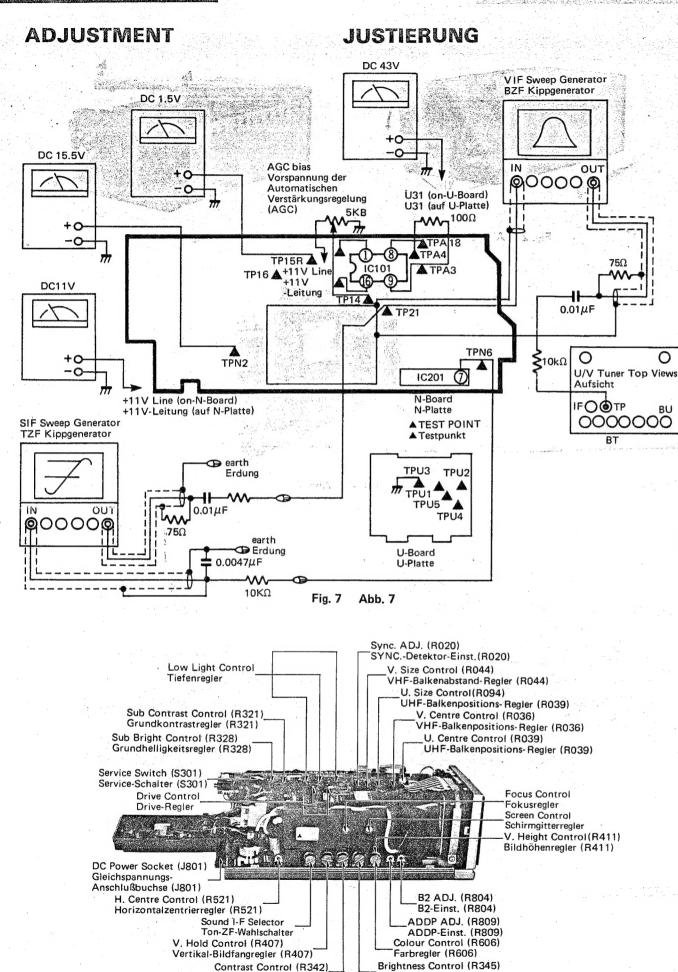

Contrast Control (R342) | Brightness Control (R34 Kontrastregler (R342) | Helligkeitsregler (R345) Fig. 8 Abb. 8

	ITEM	ADJUSTMENT	WAVEFORM
<ol> <li>2.</li> <li>3.</li> <li>4.</li> <li>5.</li> </ol>	Test equipment connection is shown in Fig. 7 Supply AGC bias voltage to TP14. Supply DC power source: DC 1.5V to TP15R 232UAH30 23 DC 11V to +11V line (on N-Board) DC 15.5V to TPN2 DC 43V to U31 (on U-Board) Connect R-jumper (100Ω) between TPA3 and TPA4. Set BT AMP. control (R100) to centre position. Set Tuning Selector (S001) to MANUAL position.	<ol> <li>Set I-F switch to 5.5 MHz side.</li> <li>Adjust AGC bias voltage for maximum amplitude of waveform.</li> <li>Adjust the level of sweep marker generator to achieve 1Vp-p output.</li> <li>Increase the output of sweep marker generator by 20 dB.</li> <li>Adjust AGC bias voltage to achieve 1Vp-p output on oscilloscope.</li> <li>Set core of L102 to lower side by detuning it.</li> <li>Adjust trap coil of Helical transformer to minimize level of PAL I carrier 30.9 MHz and 40.4 MHz.</li> <li>Adjust trap coil L102 to minimize level of PAL B carrier 31.9 MHz.</li> <li>Adjust Helical transformer (IN, OUT) and convertor of tuner to achieve a</li> </ol>	35.22 MHz  360 ± 15%  30.9 30 ± 15%  31.9 MHz  40.4 MHz  Fig. 9  40.4 MHz  Augusta 30.9 MHz  Transformer  IN  OUT
	SIF	⁴ waveform as in Fig. 9.	Fig. 10 (4.4.1.) September 6. Fig. 10 (4.4.1.1.1.1.1.1.1.1.1.1.1.1.1.1.1.1.1.1
<ol> <li>3.</li> </ol>	Test equipment connection in Fig. 7. Supply DC 11V to 11V line (on N-Board). Set sound control (R257) at the maximum position. Connect short jumper between TPU3 and earth.	<ol> <li>Set the output of sweep generator at 700mVp-p.</li> <li>Set SIF switch to 6.0 MHz side.</li> <li>Adjust T201 or T202 to achieve the waveform as in Fig. 11.</li> </ol>	-150 kHz +150 kHz +150 kHz +150 kHz +150 kHz +150 kHz Fig. 11
	Contrast  Receive colour bar signal.  Connect oscilloscope to connector C45.	1. Set controls:  Contrast Max.  Colour Min.  2. Adjust sub contrast (R321)  27V ± 1V <sub>B-W</sub>	27 ± 1V White Fig. 12
-	Colour Output		
2. 3. 4.	Set Tuning selector (S001) to AUTO position. Receive colour bar signal. Connect oscilloscope to TP47R. Connect oscilloscope to TP47B. Connect oscilloscope to TP47G.	1. Set controls:     Contrast	2.0V ± 0.1Vo-p

act office PRÜFUNG UND VORGEHEN JUSTIERUNG WELLENFORM BZF 1. Die Anschlußverbindungen der 1. Den TZF-Schalter auf 5,5 MHz 38,15 MHz Prüfgeräte sind in Abb. 7 gezeigt. einstellen. 2. AGC-Vorspannung an TP14 anlegen. 2. Die AGC-Vorspannung auf maximale Bildträger Amplitude der Wellenform einstellen. 3. Gleichspannung anlegen: 3. Den Pegel des Wobbelmarkierungsenders  $34,47 \text{ MHz}/60 \pm 15\%$ 38,9, MHz 1 Vss 100% 1,5V Gleichspannung an TP15R. 75 ± 15% auf eine Ausgangsleistung von 1Vss 11V Gleichspannung an 11V- $30.9_{30 \pm 15\%}$ Leitung (auf N-Platte) abgleichen. 30 ± 5% MHz 4. Die Ausgangsleistung des 15.5V Gleichspannung an TPN2. 40.4 MHz 31,9 MHz Wobbelsenders um 20 dB erhöhen. 43V Gleichspannung an L131 Abb. 9 5. Die AGC-Vorspannung auf eine (auf U-Platte) Ausgangsleistung von 1Vss auf dem Widerstand-Kurzschlußbrücke (100Ω) zwischen TPA3 und TPA4 Oszilloskop abgleichen. 6. Kern von L102 in die untere Position anschließen. 40.4 MHz 30.9 MHz stellen und dieses dadurch verstimmen. 5. BT-Verst-Regler (R100) auf Mitte 7. Die Sperrkreisspule des Spiraltranseinstellen. formators zur Minimalisierung des 6. Abstimm-Umschalter (S001) auf Spiraltransformator Pegels des PAL-I-Trägers von 30,9 MHz MANUAL einstellen. abgleichen. ากเ 8. Die Sperrkreisspule L110 zur Eingang Ausgang Minimalisierung des Pegels des PAL-B-Trägers von 31,9 MHz abgleichen. Abb. 10 9. Den Spiraltransformator und den Konverter des Tuners auf eine Wellenform abgleichen, wie in Abb. 9 21112713. 11 4 4 7 4 4 4 4 3 2 2 2 4 5 TZF 1. Den Ausgang des Wobbelsenders auf Die Anschlußverbindungen der -150 kHz +150 kHz 700mVss einstellen. Prüfgeräte sind in Abb. 7 gezeigt. 2. Den TZF-Schalter in die 6,0 MHz-2. 11V Gleichspannung an 11V-Leitung 6.0 MHz--Mitte (auf N-Platte) anlegen: Position einstellen. 3. Tonregler (R257) auf Maximum 3. T201 oder T202 auf eine Wellenform +150 kHz -150 kHz einstellen. gemäß Abb. 11 abgleichen. 4. Kurzschlußleitung zwischen TPU3 Abb. 11 und Masse anschließen. Schwarz Least As increase, entit automes Village in der cor DVT" mac I Kontrastregler gotzanic sob V1 of reforms DAR probablicans. Will bear 1. Farbbalkengenerator anschließen. 1. Die Regler wie folgt einstellen: ica sal Kontrastregler. . . . . . . . . . . . . Maximum 2. Oszilloskop an Anschluß C45 NOCH. anschließen. Farbsättigungsregler.....Maximum 2. Den Grundkontrast abgleichen 1988 288 QA.53 82-Bind, . . . (8888) JaniB-S8, Konstresterten : : : (R321) 27V ± 1Vs-w. manto" TERMINAL. Abb. 12 Weiß Liebiew JUDAIS I MIGSON NOVOW DA Arrivst Sen SE El neC Farbausgang Voil Unc. of an Vost VICEVOIT reculpto) 4. Wechself Jamieungs-V EXECT Vary 4 1. Die Regler wie folgt einstellen: 9450 3-1. Abstimm-Umschalter (S001) auf Or the rel Auto einstellen. Kontrastregler.......Maximum 884 637  $2.0 \pm 0.1 \text{Vo-s}$ Farbsättigungsregler.....Maximum 2. Farbbalkengenerator anschließen. VORT 3. Oszilloskop an TP47R anschließen. Helligkeitsregler ..... Minimum Grundkontrastregler . . . . Minimum 4. Oszilloskop an TP47B anschließen. 2. R612 (R-Y) auf 2,0V ± 0,1Vo-s 5. Oszilloskop an TP47G anschließen. abgleichen. 3. Die Wellenform überprüfen: Abb. 13 TP47B (B-Y)  $1.8V \pm 0.3Vo-s$ TP47G (G-Y)  $1.8V \pm 0.3Vss$ 

To TP21.  1. Set BRIGHT  1. Receive black and white signal. 2. Connect electronic voltmeter to TP32. 3. AVR for AC Adaptor  1. Connect AC Adaptor  1. Connect AC Adaptor  1. Set controls: 3. Receive black and white signal. 4. AVR for TC-30G  2. AVR for AC Adaptor  1. Set controls: 3. Set controls: 3. Set controls: 4. AVR for AC Adaptor to the signal. 5. Set controls: 6. Set Tuning selector (S001) 7. AVR for AC Adaptor  1. Connect AC adaptor to the signal. 7. AVR for TC-30G  2. AVR for AC Adaptor 7. Set Tuning selector (S001) 7. AVR for AC Adaptor 7. Set Tuning selector (S001) 7. AVR for AC Adaptor 8. Set Tuning selector (S001) 8. Set Controls: 8. Set Controls: 9. Set Tuning selector (S001) 9. Set Tuning selector (S00	ITEM	ADJUSTMENT SM	PRÜFUNG UND VORGEHEN	SHESHOJUSTIERUNG 1044
1. Set turing selector (S001) to centre position. 2. Connect electronic voltmeter to TP2 and MANUAL position to centre position. 3. Agiust T103. 5.8V ± 0.15V  SUB BRIGHT 1. Receive black and white signal. Colorat Max. Brightness. Max. Srightness. Max. Stabbright (R328) ds μα = 10 μα  APC 1. Connect electronic voltmeter to TP87. 2. Set Turing selector (S001) to AUTO position.  AUTO position.  AVR for AC Adaptor 1. Set controls: Brach Act adaptor to the size. A Agiust Apc. Act and spot or the size and Appla Act and Stabbeth Act and white signal. Agiust Apc. Act and spot or the size and Appla Act and Stabbeth Act and white signal. Agiust Apc. Act and Stabbeth Act and white signal. Agiust Apc. Act and Stabbeth Act and white signal. Agiust Apc. Act and Stabbeth Act and white signal. Agiust Apc. Act and Stabbeth Act and white signal. Agiust Apc. Act and Stabbeth Act and white signal. Agiust Apc. Act and Stabbeth Act and white signal. Agiust Apc. Act and Stabbeth Act and white signal. Agiust Apc. Act and Stabbeth Act and white signal. Agiust Apc. Act and Apple Apc. Act and Apple Apc. Act and Apple Apc. Act and Apple	AFC			273
Sub BriGHT   1. Receive black and white signal. 2. Connect Volt ohm meter (no.3md full scale range) TPD1 Positive TPD2 Negative   2. Volt-Ohrmeter (Jam A Colour Min. 2. Adjust Sub-bright (R328) 45 μ Δ + 10 μ Δ	2. Connect electronic voltmeter to TP21.	to MANUAL position.  2. Set BT AMP. control (R100) to centre position.  3. Adjust T103, 5.3V ± 0.15V.	1. Farbbalkengenerator anschließen. 2. Elektronisches Voltmeter an TP21 anschließen.	1. Abstimm-Umschalter (S001) auf MANUAL einstellen. 2. BT-VerstRegler (R100) auf Mitte einstellen. 3. T103 auf 5,3V ± 0,15V abgleichen.
Avright Connect electronic voltmeter to TPB7.	1. Receive black and white signal. 2. Connect Volt ohm meter (0.3mA full scale range) TPD1 Positive TPD2 Negative	1. Set controls:  Contrast Max.  Brightness Max.  Sub-bright Mid.  Colour Min.  2. Adjust Sub-bright (R328)  45 $\mu$ A + 10 $\mu$ A	Grundhelligkeit  1. Schwarzweiß-Signal empfangen. 70  2. Volt-Ohmmeter (0,3mA Vollskalenbereich) TPD1 Positiv TPD2 Negativ	1. Die Regler wie folgt einstellen: Konstrastregler
AVR for AC Adaptor  1. Connect AC adaptor to the set.  2. AC power supply 220V for TC-30U 240V for TC-30G  3. Set controls: B+ ADJ. (R866)Mid. ACP ADJ. (R858) Counterclockwise 4. Adjust B+ ADJ. 13.5V ± 0.1V  AVR  1. Receive black and white signal. 3. Connect AC adaptor to the set. (AC adaptor should be adjusted before this adjustment.) 4. AC power supply: 2. Cover supply: 2. Connect AC adaptor to the set. 3. Set controls: B+ ADJ. (R866)Mid. ACP ADJ. (R858) Counterclockwise 4. Adjust B+ ADJ. 13.5V ± 0.1V  AVR  1. Set charge/TV selector switch of AC adaptor to TV position. 2. Set controls: ADDP ADJ. (R809)	Connect electronic voltmeter to TPB7.     Set Tuning selector (S001) to	1. Receive colour bar signal. 2. Read indication on electronic voltmeter. 3. Receive black and white signal. 4. Adjust APC control (R609) to obtain the values specified in the item 2 within a tolerance	Automatische Phasenregelung  1. Elektronisches Voltmeter an TPB7 anschließen: 2. Abstimm-Umschalter (S001)	<ol> <li>Farbbalkenmuster empfangen.</li> <li>Die Anzeige auf dem elektronische Voltmeter ablesen.</li> <li>Schwarzweiß-Signal emfangen.</li> <li>APC-Regler (R609) so einstellen, daß die in Punkt 2 beschriebenen Werte mit einer Toleranz von</li> </ol>
AVR  1. Receive black and white signal. 2. Connect electronic voltmeter to collector of Q801. 3. Connect AC adaptor to the set. (AC adaptor should be adjusted before this adjustment.) 4. AC power supply: 220V for TC-30U  1. Set charge/TV selector switch of AC adaptor to TV position. 2. Set controls: anschließen. 2. Das elektronische Voltmeter an den Kollektor von Q801 anschließen. 3. Das Netzteil an das Gerät anschließen. 4. DDP-Einst. (R809) Linksanschlag anschließen. 4. Mid. (Das Netzteil sollte vor dieser Einstellung abgeglichen werden.) 3. Adjust B2 ADJ. 11.0V ± 0.1V  4. Wechselspannungs-Versorgung: 1. Den "TV/Charge"-Umschalter des Netzteils in die "TV"-Stellung bringen. 2. Die Regler wie folgt einstellen: ADDP-Einst. (R809) Linksanschlag B2-Einst. (R866) Mitte Konstrastregler Minimum werden.) 3. Den B2-Einsteller abgleichen. 11.0V ± 0.1V	Connect AC adaptor to the set.     AC power supply 220V for TC-30U	switch of AC adaptor to TV position.  2. Operate the set over 10 minutes.  3. Set controls: B+ ADJ. (R866)Mid. AOCP ADJ. (R858)	Das Netzteil an das Gerät anschließen.     Wechselspannungs-Versorgung 220V (für TC-30U)	<ol> <li>Den "TV/Charge"-Umschälter des Netzteils in die "TV"-Stellung bringen.</li> <li>Das Fernsehgerät mehr als 10 Minuten eingeschaltet lassen,</li> <li>Die Regler wie folgt einstellen: B+-Einst.(R866)Mitte AOCP-Einst.(R858) Linksanschlag</li> <li>Den B+-Einsteller abgleichen.</li> </ol>
in $\pm$ 10% and confirm that the reading voltage of 11.0V $\pm$ 0.2V. 240V (für TC-30G) innerhalb $\pm$ 10% regeln, und überprüfen, daß die angezeigte Spannung 11,0V $\pm$ 0,2V beträgt.	. Receive black and white signal Connect electronic voltmeter to collector of Q801 Connect AC adaptor to the set. (AC adaptor should be adjusted before this adjustment.) . AC power supply: 220V for TC-30U	switch of AC adaptor to TV position.  2. Set controls:    ADDP ADJ. (R809)	<ol> <li>Das Netzteil an das Gerät anschließen.</li> <li>Das elektronische Voltmeter an den Kollektor von Q801 anschließen.</li> <li>Das Netzteil an das Gerät anschließen.         <ul> <li>(Das Netzteil sollte vor dieser Einstellung abgeglichen werden.)</li> </ul> </li> <li>Wechselspannungs-Versorgung: 220V (für TC-30U) 240V (für TC-30G)</li> </ol>	1. Den "TV/Charge"-Umschalter des Netzteils in die "TV"-Stellung bringen.  2. Die Regler wie folgt einstellen: ADDP-Einst. (R809)

HANDERSON OF HOUSE WITH CO. AND CO. AN

### ADDP (Automatic Deep Discharge Protection Circuit) ADJUSTMENT

- 1. Connect electronic voltmeter to DC Socket (J801).
- 2. Supply DC power source (0V  $\sim$  25V, 2A) to positive side of DC Socket (J801).
- Supply DC power source to achieve voltage of 13.5V at DC Socket (J801).
- 4. Turn the power switch ON and receive a black and white signal.
- Adjust DC power source for 10.3V on the indicating voltmeter, and turn ADDP control (R809) clockwise slowly until the picture on screen disappears.
- 6. Turn the power switch OFF, and C801 discharges.
- 7. Repeat steps 3 and 4.
- 8. Gradually lower the DC power supply voltage from 13.5 V to  $10.3 \text{V} \pm 0.1 \text{V}$  at which the picture should disappear.

#### BT GAIN ADJUSTMENT

- Connect electronic voltmeter to BT terminal of U/V tuner.
- 2. Supply DC power source (+18V) to TPN2.
- 3. Set tuning selector (S001) to MANUAL position.
- 4. Set UHF/VHF selector (S002) to VHF position.
- 5. Set BT AMP. control (R100) to mid. position.
- Adjust BT AMP. control (R100) to achieve voltage of 19V ± 0.3V at BT terminal of U/V tuner.

## TUNING SYSTEM (SYNC. SIGNAL, AFC SENSITIVITY) ADJUSTMENT

#### Preparation

- 1. Set up power supply, oscilloscope and electronic voltmeter as shown in Fig. 14.
- 2. Set tuning selector (S001) to MANUAL position.

der niedzinstein und höchstein emplanticaren

3. Set UHF/VHF selector (S002) to VHF position. Assistant brue negation and providence negations recommended. I the UME SHV nep profit formalized accommod negations.

ebstand-Region (1044) so anstellan, daß der Anzeigebar-

### Schutzschaltung)-ABGLEICH 1. Das elektronische Voltmeter an den Gleid

ADDP (Automatische Tiefenentladungs-

- Das elektronische Voltmeter an den Gleichspannungs-Versorgungsanschluß (J801) anschließen.
- 2. Gleichspannung (0V  $\sim$  25V, 2A) an die positive Seite der Gleichspannungsbuchse (J801) anlegen.
- 3. Gleichspannung versorgen, damit an der Gleichspannungsbuchse (J801) eine Spannung von 13,5V erreicht wird.
- 4. Den Ein-/Aus-Schalter einschalten und ein Schwarzweiß-Signal empfangen.
- Die Gleichspannungsversorgung auf eine Anzeige von 10,3V auf dem Voltmeter abgleichen, und den ADDP-Regler (R809) langsam im Uhrzeigersinn drehen, bis das Bild auf dem Bildschirm verschwindet.
- 6. Den Ein-/Aus-Schalter ausschalten wodurch C801 entladen wird.
- 7. Die Schritte 3 und 4 wiederholen.
- 8. Die Versorgungs-Gleichspannung langsam von 13,5V auf  $10,3V \pm 0,1V$  reduzieren, wobei das Bild verschwinden sollte.


#### BT-VERSTÄRKUNGS-ABGLEICH

- Das elektronische Voltmeter an den BT-Anschluß des U/V-Tuners anschließen.
- 2. Gleichspannung (+18V) an TPN2 anlegen.
- 3. Senderabstimm-Umschalter (S001) auf MANUAL einstellen.
- 4. Den UHF/VHF-Umschalter (S002) in die VHF-Postellen.
- 5. Den BT-Verstärkungsregler (R100) auf Mitte einstellen.
- Den BT-Verstärkungsregler (R100) so abgleichen, daß am BT-Anschluß des U/V-Tuners eine Spannung von 19V ± 0,3V erreicht wird.

### SENDERABSTIMM-SYSTEM-ABGLEICH (SYNC.-SIGNAL, AFC-EMPFINDLICHKEIT)

#### Vorbereitung

- Die Anschlußverbindungen für Stromversorgung, Oszilloskop und elektronisches Voltmeter gemäß Abb. 13 vornehmen.
- Senderabstimm-Umschalter (S001) auf MANUAL einstellen.
- Den UHF/VHF-Umschalter (S002) in die VHF-Position stellen.

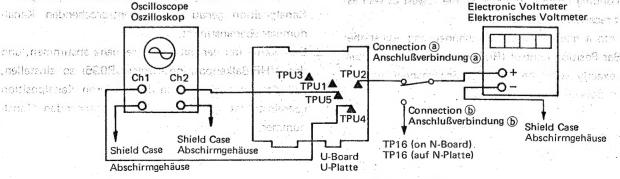



## Alignment Step Politicare To To Estate On A TO GA SYNC SIGNAL (Connection (a))

- 1. Receive a colour bar signal, ablow ecountries and in-
- 2. Adjust SYNC, ADJ. control (R020) to achieve voltage of 1.4V ± 0.6V at TPU2. 30 web granded distributions

S. Claidings yitting versity to darnitrop do Colong participations

ner Giolotyponepings (2016) versegration

#### AFC SENSITIVITY (Connection (b) ) a serious

- 1. Receive a colour bar signal, in the label and and and a
- 2. Adjust the AFT ADJ. control (R120) so that the level at TPU4 is low (OV) and the level at TPU5 is high (8V).

Note: The levels at TPU4 and TPU5 can be reversed, and will vary depending on whether the auto search channel selection circuit is in the channel-up mode or channel-down mode.

- 3. Set tuning selector (S001) to AUTO position.
- Press the auto tuning up switch (S004) to receive the middle receivable channel, again press the auto tuning up switch (S004) to receive the channel immediately above.
- 5. Adjust AFT ADJ. control (R120) to achieve voltage of 4.70V ± 0.05V at TP16.
- Press the auto tuning up switch (S004) to receive the highest receivable channel, then press the auto tuning down switch (S005) to receive the channel immediately below. Make sure the voltage at TP16 is 5.30V or higher.

# ADDP (Automatic Deep Discharge Protectulation SYNC-SIGNAL (Amstallation and Amstallation (Amstallation and Amstallation and A

- 1. Farbbalkengenerator anschließen. pinomoele poemico il
- 2. Den. SYNC. DETEKTOR-Einstellregler (R020) as so abgleichen, daß eine Spannung von 1,4V ± 0,6V an VcTPU2 erreicht wird.

### AFC-EMPFINDLICHKEIT: (Anschlußverbindung (b))

- 1. Farbbalkengenerator anschließen.
- 2. Den. AFC-Einstellregler (R120) so einstellen, daß der Pegel am TPU4 niedrig ist (0V), und daß der Pegel an TPU5 hoch ist (8V).

Anmerkung: Die Pegel an TPU4 und TPU5 können umgekehrt sein, und sie sind verschieden, je nachdem ob die Suchlaufautomatik-Kanalwahlschaltung in der Aufwärts- oder Abwärts-Betriebsart ist.

- 3. Den Senderabstimm-Umschalter (S001) auf AUTO einstellen.
- 4. Den Schalter für automatische Senderabstimmung aufwärts (S004) drücken, um den mittleren empfangbaren Kanal zu empfangen; anschließend den selben Schalter (S004) nochmals drücken, um den nächsthöheren Kanal zu empfangen.
- 5. Den AFC-Einstellregler (R120) so einstellen, daß eine Spannung von 4,70V ± 0,05V an TP16 erreicht wird.
- 6. Den Schalter für automatische Senderabstimmung aufwärts (S004) drücken, um den höchsten empfangbaren Kanal zu empfangen; anschließend den Schalter für automatische Senderabstimmung abwärts (S005) drücken, um den nächsttieferen Kanal zu empfangen. Überprüfen, daß dis Spannung an TP16 5,3W oder höher ist.

### TUNING INDICATOR BAR POSITION ADJUSTMENT

#### Adjustment Step

- Tune into the highest and lowest frequency channels receivable, and adjust the VHF Bar Interval control (R044) so that the tuning bar aligns exactly with the corresponding channel number at the lowest as well as highest receivable channel position.
- Tune into a middle frequency channel, and adjust the VHF Bar Position control (R036) so that the tuning bar aligns exactly with the corresponding channel number at the middle channel position.

#### ABGLEICH DER ABSTIMMANZEIGEBALKEN-POSITION

#### **Abgleich**

- Nacheinander den Kanal mit der höchsten und der niedrigsten Frequenz abstimmen, und den VHF-Balkenabstand-Regler (R044) so einstellen, daß der Anzeigebalken an der niedrigsten und höchsten empfangbaren Kanalposition genau mit der entsprechenden Kanalnummer übereinstimmt.
- Den Kanal mit der mittleren Frequenz abstimmen, und den VHF-Balkenpositions-Regler (R036) so einstellen, daß der Anzeigebalken an der mittleren Kanalposition übereinstimmt genau mit der entsprechenden Kanalnummer.

- Make sure that the tuning bar aligns exactly with the corresponding channel numbers at the lowest, highest and middle receivable channel position.
  - If not, readjust VHF Bar Interval control (R044) and VHF Bar Position control (R036).
- Adjust the UHF channels in the same way using the UHF Bar Interval control (R094) and the UHF Bar Position control (R039).
- Überprüfen daß der Anzeigebalken an der niedrigsten, höchsten und mittleren empfangbaren Kanalposition genau mit der entsprechenden Kanalnummer übereinstimmt.
  - Andernfalls mit dem VHF-Balkenabstand-Regler (RO44) und dem VHF-Balkenpositions-Regler (RO36) erneut abgleichen.
- Die UHF-Kanäle auf gleiche Weise unter Verwendung des UHF-Balkenabstand-Reglers (R094) und des UHF-Balkenpositions-Reglers (R039) abgleichen.

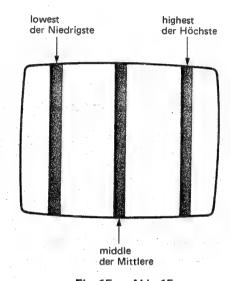


Fig. 15 Abb. 15

#### COLOUR PURITY ADJUSTMENT (See Fig. 16)

- 1. Place the TV receiver facing NORTH or SOUTH.
- 2. Plug in TV receiver and turn it ON.
- 3. Operate the TV receiver over 15 minutes.
- 4. Fully degauss the TV receiver by using an external degaussing coil.
- 5. Receive a crosshatch pattern and adjust the static convergence control roughly.
- 6. Loosen the clamp screw of the deflection yoke and pull the deflection yoke toward you.
- 7. Fully turn the red and blue low light controls (R356, R352) counterclockwise and set the green low light control (R354) to it's mid position.
- 8. Adjust the purity magnets so that green field is obtained at the centre of the screen. (Fig. 16)
- Slowly push the deflection yoke toward bell of CRT and set it where a uniform green field is obtained.
- 10. Tighten clamp screw of the deflection yoke.

Richtige Schwerzweiß-Wedergobe bei allen Insligkeitzeinstehn zur wurd arreicht, venn dar Schlängillerreglet,
die Sanze eine mit das Seine einfing eiguglichen
eine, Dan die Ergebnisse man aufneubnstehland so ist
mit dem Ungeleit nocheste von Anfang zu beginnen.

#### FARBREINHEITS-ABGLEICH (Siehe Abb. 16)

- Das Fernsehgerät gegen Norden oder Süden gerichtet aufstellen.
- 2. Das Fernsehgerät ans Netz anschließen und einschalten.
- 3. Das Fernsehgerät mehr als 15 Minuten eingeschaltet lassen.
- 4. Das Fernsehgerät mit separater Entmagnetisierungspule vollständig entmagnetisieren.
- 5. Schachbrettmuster empfangen und Statik-Konvergenz-Regler grob einstellen.
- 6. Die Klemmschraube des Ablenkjochs lösen und das Ablenkjoch gegen sich ziehen.
- 7. Die Tiefenregler für Rot und Blau (R356, R352) auf Linksanschlag drehen, und den Tiefenregler für Grün (R354) auf Mitte einstellen.
- 8. Die Reinheitsmagnete so einstellen, daß im Zentrum des Bildes ein grünes Feld erscheint. (Abb. 16)
- 9. Das Ablenkjoch langsam in Richtung Bildschirm schieben und feststellen, wenn der ganze Bildschirm einheitlich grün ist.
- 10. Die Klemmschraube des Ablenkjochs anziehen.

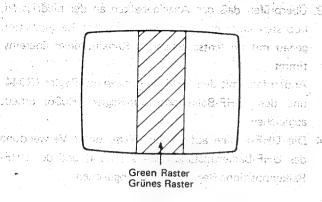


Fig. 16 Abb. 16

-radocki

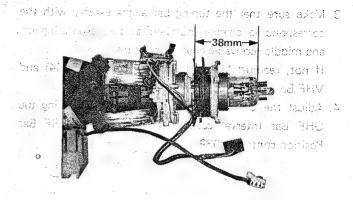


Fig. 17 Abb. 17

#### WHITE BALANCE ADJUSTMENT (See Fig. 18)

- 1. Receive a black and white picture signal.
- 2. Set controls as follow:

	Drive (R357, R359)
	Low light (R352, R354, R356)
	60° clockwise from the fully counterclockwise
	Screen (R573) Fully counterclockwise
	Contrast
	Brightness
	Service SW
	Sub-Bright
-	

- 3. Connect a VTVM between terminal C45 and earth. Then adjust Sub Bright control to obtain  $73V \pm 2V$  on the VTVM.
- 4. Slowly turn the screen control clockwise to the point where one of the three beams just illuminates.
- 5. Set the low light control of the colour which appeared at the step 4 as it is, and turn the remained to low light controls toward clockwise, from the setting position at the step 4 so as to get a white horizontal line on the picture tube.
- 6. Reset the service switch to NORMAL position.
- 7. Adjust drive controls (R357, R359) to obtain a uniform white raster.
- Check the black and white picture detail for proper black and white rendition (No colouration) from lowlights to highlights and at all brightness levels for proper tracking.

Proper tracking at all brightness levels can be obtained when the screen control, low light controls and drive controls are properly adjusted.

If the results are unsatisfactory, repeat from the beginning.

#### WEISSBALANCE-ABGLEICH (Siehe Abb. 18)

- Schwarzweiß-Bildsignal empfangen,
- 2. Die Regler wie folgt einstellen:

daointean in h

Drive-Regler (R357, R359) . . . . . . . . Mitte Tiefenregler (R352, R354, R356) . . 60° vom äußersten Linksanschlag im Uhrzeigersinn drehen.

The state of the s
Schirmgitterregler (R573) Linksanschlag
Kontrastregler
Helligkeitsregler Maximum
Service-SchalterService
Grundhelligkeitsregler Mitte

- 3. Das elektronische Voltmeter zwischen Anschluß C45 und Masse anschließen. Anschließend den Grundhelligkeitsregler so einstellen, daß auf dem elektronischen Voltmeter  $73V\pm2V$  angezeigt wird.
- 4. Den Schirmgitterregler langsam im Uhrzeigersinn drehen, bis gerade einer der drei Striche sichtbar wid.
- 5. Den Tiefenregler der Farbe, die in Schritt 4 sichtbar wurde, in seiner Stellung belassen, und die beiden anderen im Uhrzeigersinn von der Einstellung in Schritt 4 drehen, so daß auf dem Bildschirm ein weißer horizontaler Strich erscheint.
- 6. Den Service-Schalter auf "NORMAL" zurückstellen.
- 7. Mit den Drive-Reglern (R357, R359) ein gleichmäßig weißes Raster einstellen.
- Die schwarzen und weißen Bildteile sind auf exakte Schwarzweiß-Wiedergabe (keine Färbung) von den hellsten bis dunkelsten Teilen und bei allen Stellungen des Helligkeitsreglers zu prüfen.


Richtige Schwarzweiß-Wiedergabe bei allen Helligkeitseinstellungen wird erreicht, wenn der Schirmgitterregler, die Tiefenregler und die Drive-Regler richtig abgeglichen sind. Sind die Ergebnisse nicht zufriedenstellend, so ist mit dem Abgleich nochmals von Anfang zu beginnen.

#### CONVERGENCE ADJUSTMENT (See Fig. 18))

- 1. Receive a dotted pattern.
- Unfix the convergence magnet clamper and align red with blue dots at the centre of the screen by rotating R, B static convergence magnets.
- 3. Align red/blue with green dots at the centre of the screen by rotating (RB)-G static convergence magnet.
- 4. Fix the convergence magnets by turning the clamper.
- Remove the DY wedges and slightly tilt the deflection yoke horizontally and vertically to obtain the good overall convergence.
- 6. Fix the deflection yoke by wedges.
- 7. If purity error is found, follow "Purity Adjustment" instructions.

#### KONVERGENZ-ABGLEICH (Siehe Abb. 18)

- 1. Ein Punktmuster-Testbild empfangen.
- Die Konvergenzmagnet-Klemme lösen und die roten und blauen Punkte in der Mitte des Bildschirms durch Drehen der Statik-Konvergenzmagnete (R, B) zur Deckung bringen.
- Die grünen Punkte in der Mitte des Bildschirms durch Drehen des (RB)-G-Statik-Konvergenzmagnets mit den roten/blauen Punkten zur Deckung bringen.
- 4. Die Konvergenzmagnete durch Drehen der Klemme feststellen.
- Die DY-Keile entfernen und das Ablenkjoch leicht horizontal und vertikal schwenken, bis gesamthaft gute Konvergenz erreicht ist.
- 6. Das Ablenkjoch mit den Keilen feststellen.
- 7. Falls ein Farbreinheitsfehler festgestellt wird, sind die Anleitungen im Abschnitt "Farbreinheits-Abgleich" zu befolgen.

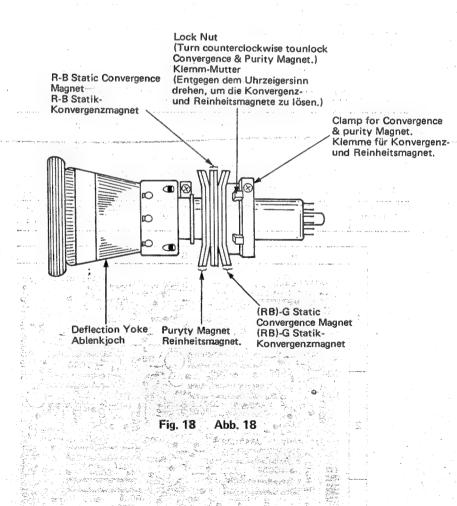




#### CONDUCTOR VIEWS ANSICHT DER LEITERBAHNEN

B-BOARD TNP17110AA


**B-PLATTE TNP17110AA** 

	रिप्रेंड प्रदेशका	Park the Albanda Albanda			1 3 1 1 1 1	<u> </u>		<u> 1767 - 477 (</u>	27 187 3 19 3		出了增长的	对可只数
Į	IC	IC601					IC301	IC302	IC202			
	Transistor	Q353	Q352		Q351	Q303	Q304			7.	- <del>1   1   1   1   1   1   1   1   1   1 </del>	- Prince
	Diode	2 No. 1 (27 No. 1 (47 E	D601	18(245 ED	d	J (5)		14 C 15 14 14 14 14 14 14 14 14 14 14 14 14 14	D301	ولايالية الأرق	reference to	त हा हो
. [	Test Point	TPB7 TP47R	al en	ТР47В	TP47G	. 1	TPB2	TIN VI ED	ar entire	18790 1963	re atab er	uld fin

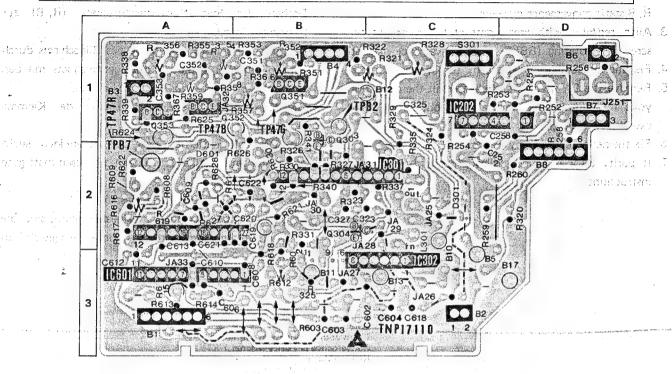

#### U-BOARD TNP17035AA U-PLATTE TNP17035AA

IC	10002	P IC001		IC004 IC00	3
Transistor			Q013 Q003	Q.004	002 Q001
Diode	D012 D010 D004 D005 D011 D033	D032 D007	013 D002 D031 D009		D014 D006 D008 D001
Test Point			TPU3	TPU1 TPU5	TPU2 TPU4

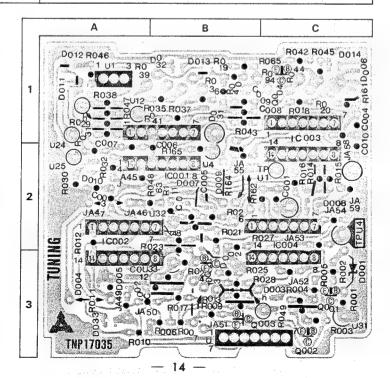



### A-BOARD TNP17302AA A-PLATTE TNP17302AA

N-BO	AR	D	TNP	17

ıc	1C402	IC401 IC801
Transistor	Q551	Q404 Q405
Diode	D554 D809 D551 D553	D503 D808 D807 D406
Test Point	TPD2 TPD1	TP31

IC		ICŹ	201 IC10	)1
Transistor	Q201	Q302	Ω202 Ω301	
Diode				D201 D202
Test Point	TPN TP12	N6 TPA18	TPA3 TP21 TP14	TPA2 TPA1

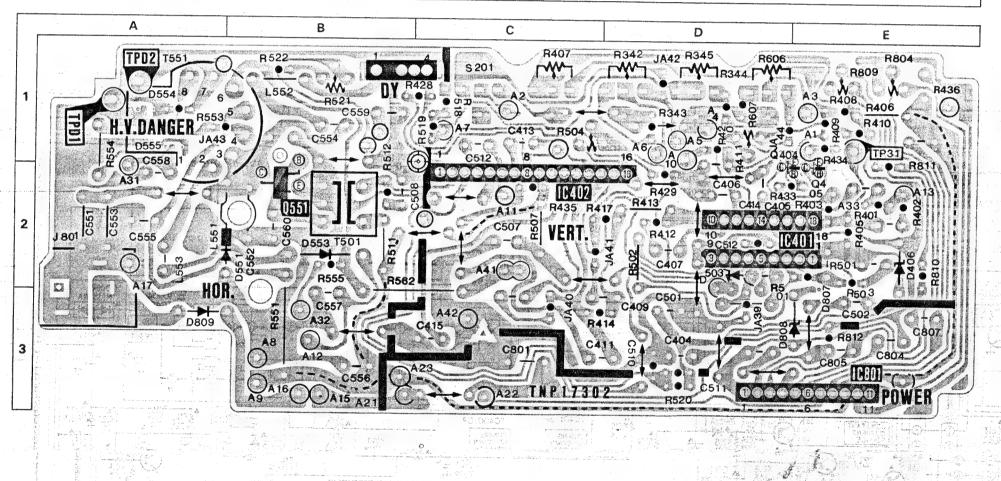

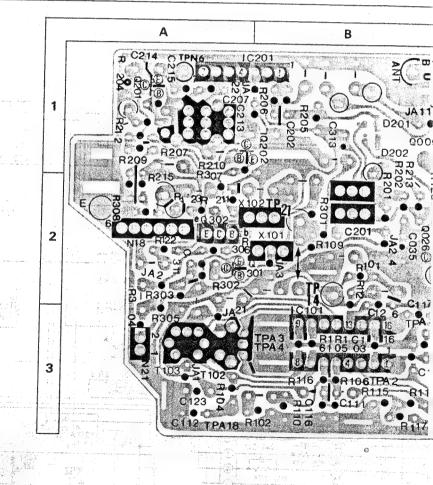


Motes In the voltage voltage expression of 1 this value is written

The control of the co

BOARD TNP17109AA

N-PLATTE TNP17109AA

IC101						1C007			1	C005		
		Q006 Q026 Q027	Q007 Q016 Q101	Q015	Q014		Q023	Q012 Q021 Q011 C Q024		Q005 (	2008	Q009
	D201 D202			D025 D020	)	D021		D022 D029 D019 D015	D026	i	D017	D018
TP14	TPA2 TPA1		<i>:</i>	TP15	R TP	16	TPN2					

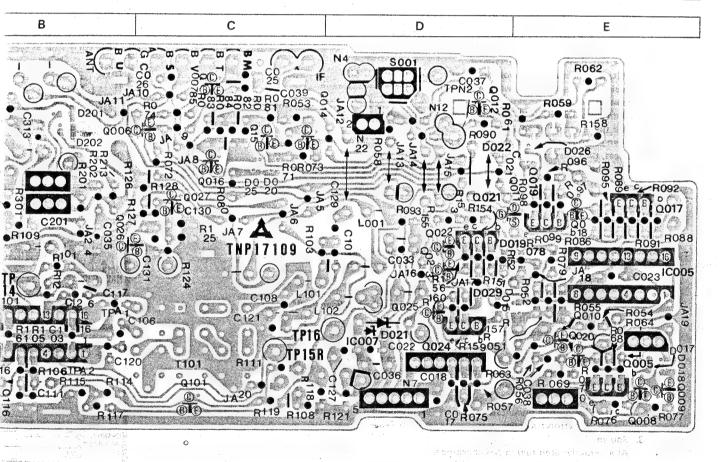

### SCHEMATIC DIAGRAM FOR MODELS TC-30G/TC-30U (CHASSIS NO. X-30)

#### NOTE:

1. RESISTOR

All resistors are carbon 1/4W resistor, unless otherwise noted the following marks.

Unit of resistance is OHM ( $\Omega$ ), (K = 1.000, M = 1.000.000).

∧ : Solid resistor

+W+: Thermistor

: Wire wound resistor

: Non inflammable resistor

Fuse resistor

: Chip Parts

: Metal oside resistor

2. CAPACITOR

All capacitors are ceramic 50V capacitor, unless otherwise noted the following marks.

Unit of capacitance is  $\mu F$ , unless otherwise noted.

M : Polyester capacitor

P : Polypropylene capacitor

+#=: Electrolytic capacitor

: Chip Parts

3. COIL

Unit of inductance is µH.

4. TRANSISTOR

▲ : Chip Parts

5. TEST POINT

▼ : Test point position.

6. VOLTAGE MEASUREMENT

Voltage is measured by a volt ohm meter with DC 20K OHM/V receiving color bar signal, when all controls are set to the maximum position.

- 7. When arrow mark ( ) is found, connection is easily found along with the direction of an arrow.
- 8. When schematic diagram of a board is described in more than two
- 9. This schematic diagram is the latest at the time of printing and subject to change without notice.
- 10. : Indicates the major signal flow.

#### Anmerkung:

1. Wiederstände

Alle Widerstände sind 1/4W Kohlewiderstände, wenn sie nicht durch eine der folgenden Markierungen geken-Widerständswert sind in Ohm angegeben (K = 1,000, M = 1,000,000).

+ : Thermistor

: Drahtwiderständ (F) : Entflammbarer Widerständ

: Widerständ mit Sicherung

: Chip-Teile

: Metalloxydwiderständ

2. Kondensatoren

Alle Kondensatoren sind keramiscke Kondensatoren mit 50V Betriebsspannung, wenn sie nicht durch eine der folgenden Markierungen gekennzeichnet sind.

Alle Kapazitäten sind in  $\mu$ F angegeben, wenn nichts anderes genannt ist.

(M): Polyester-Kondensator

P: Polystyren-Kondensator

+11: Elektrolyt-Kondensator

: Chip-Teile

3. Spulen

Alle Induktivitäten sind in  $\mu$ H angegeben.

4. Transistor

▲ : Chip-Teile


5. Testpunket

: Lage des Testpunktes.

Spannungsmessungen

Spannungen sind mit einem Voltmeter mit 20 K Ohm/V bei angeschlossenem Farbbalkengenerator und allen Regiern in Maximalstellung gemessen.

- 7. Endet eine Leitung in einem Pfeil, so ist deren Fortsetzung in Pfeilrichtung zu finden.
- 8. Sind Schaltungen einer Platine an mehr als zwei Stellen beschrieben, so sind diese durch eine punktierte Linie eingekreist.
- 9. Dieses Schaltbild war bei Drucklegung auf dem neuesten Stand und wird bei Anderungen nicht erfaßt.
- kennzeichnet den hauptsächlichen Signalfluß,

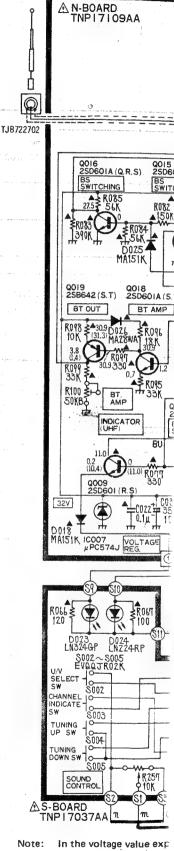


at Sound IF selector sw

Anmerkung:

Bei der Spannun sich um den Spa-

TZF-Umschalter

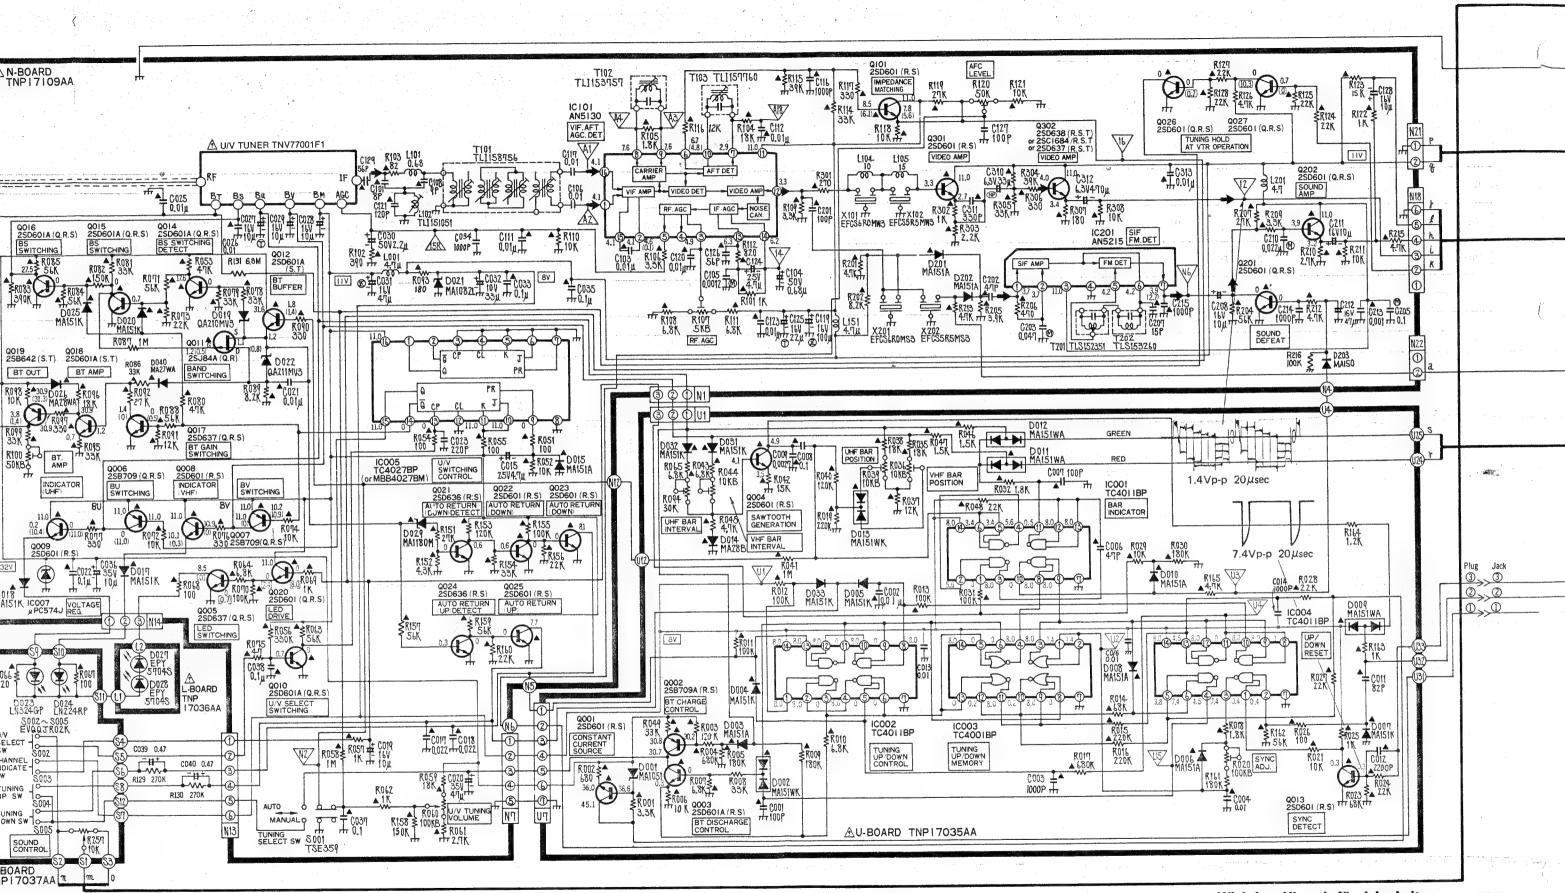

In the voltage value expression of (  $\,$  ), this value is voltage at Sound IF selector switch at 6.0 MHz position.

ung: Bei der Spannungswertangabe ( ) handelt e sich um den Spannungswert bei Einstellung des TZF-Umschalters in die 6,0 MHz-Position. Note: In the voltage value expression of [ ], this value is voltage at indicator light on.

Anmerkung: Bei der Spannungswertangabe von [ ] handelt sich um den Spannungswert beim Aufleuchten der Anzeige.


#### -Important safety notice

Components identified by  $\Delta$  mark have special characteristics important for safety. When replacing any of these components, use only manufacturer's specified.


#### -Wichtiger Hinweis für sicherheit<sup>.</sup>


Mit  $\Delta$  markierte Komponente weisen spezielle Eigenschaften auf und sind für Sicherheit wichtig. Beim Auswechsel eines dieser Komponente nur das vom Hersteller vorgeschriebene verwenden.


#### TC-30G/TC-30U

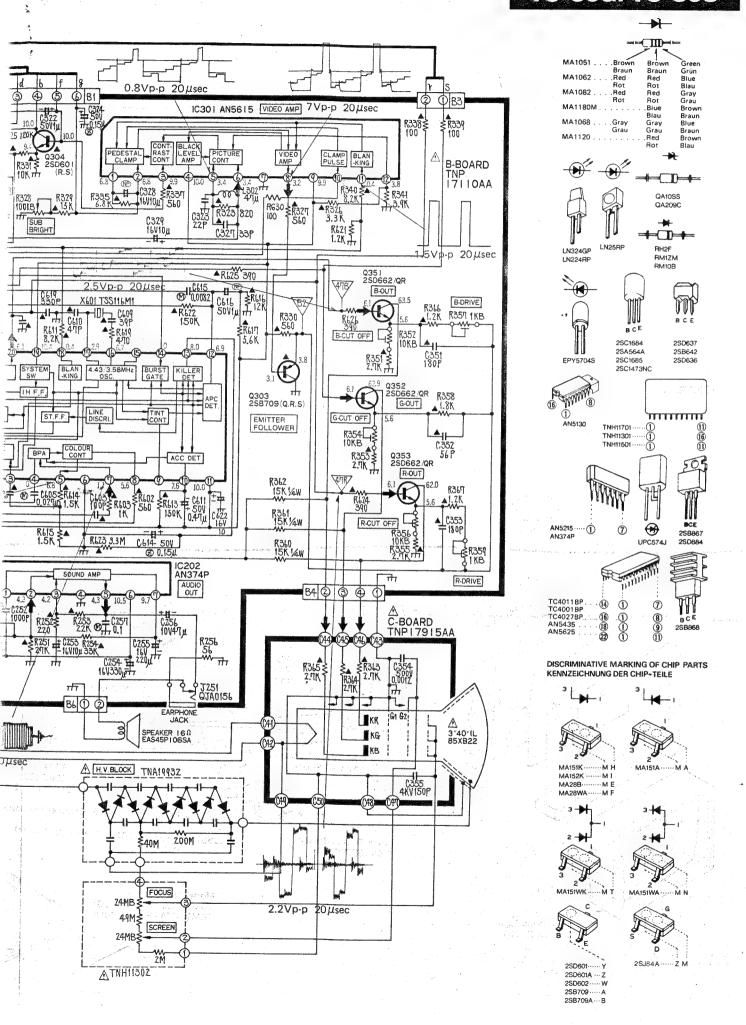

### TC-30G/TC-30U TC-30G/TC-30U

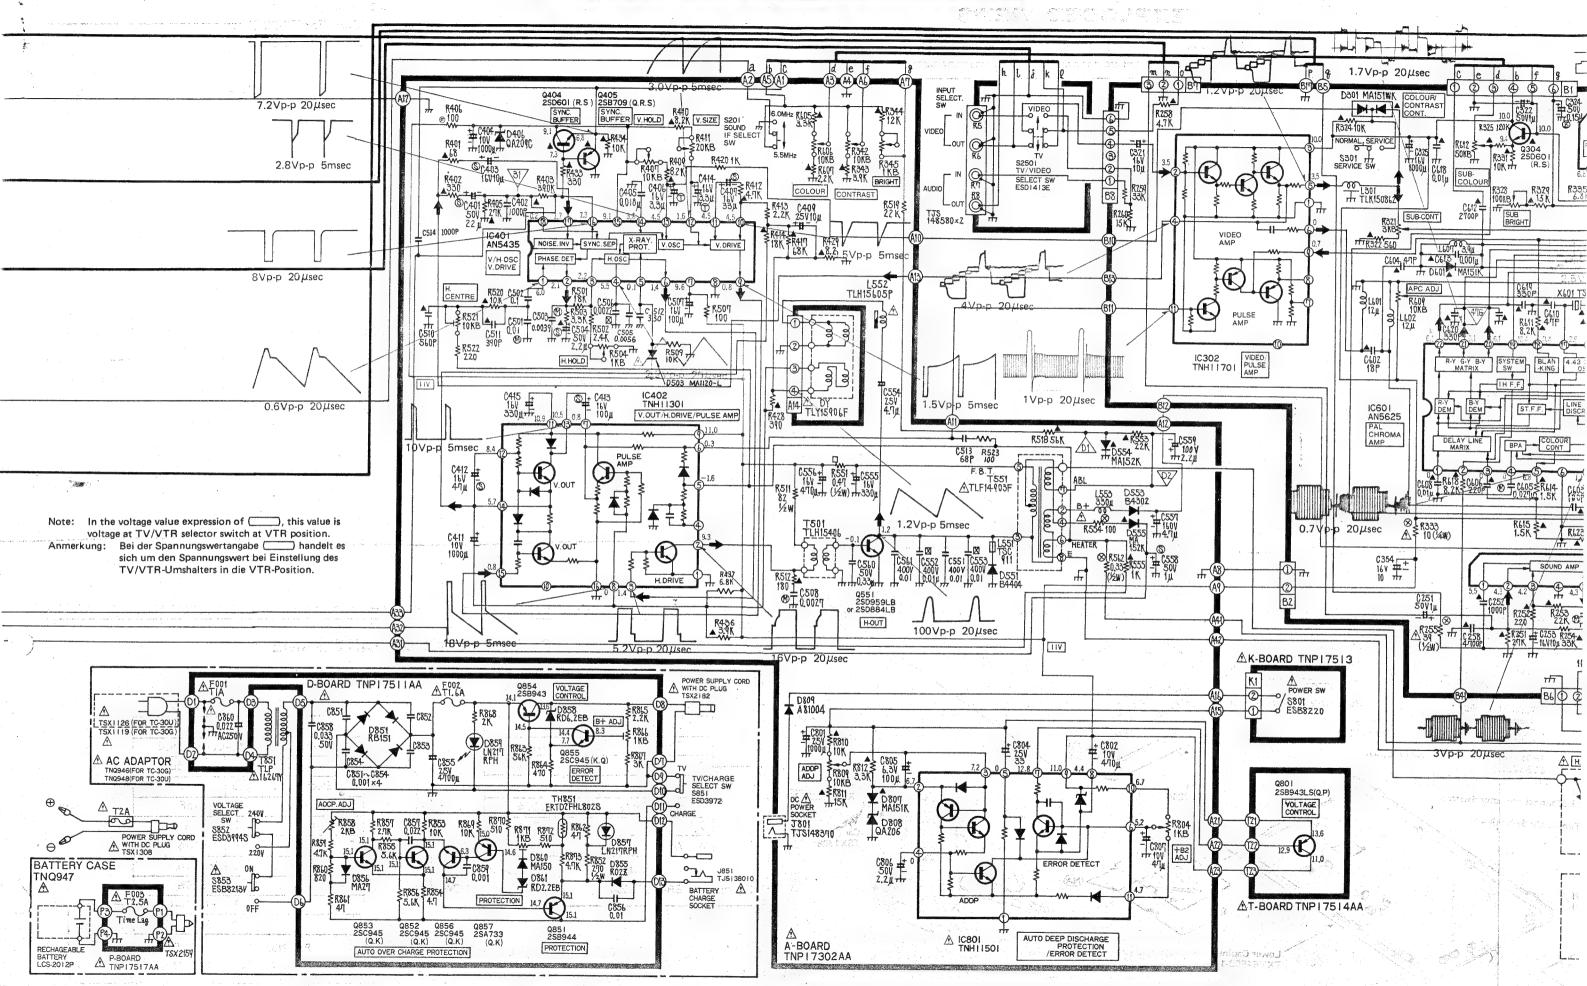

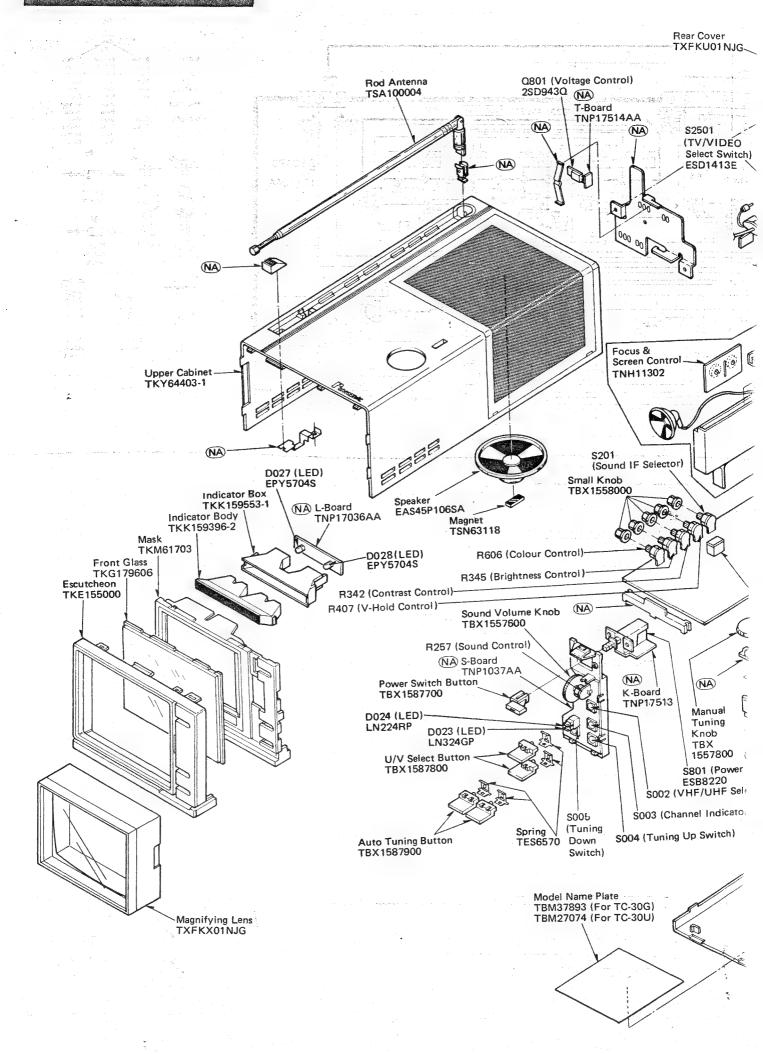

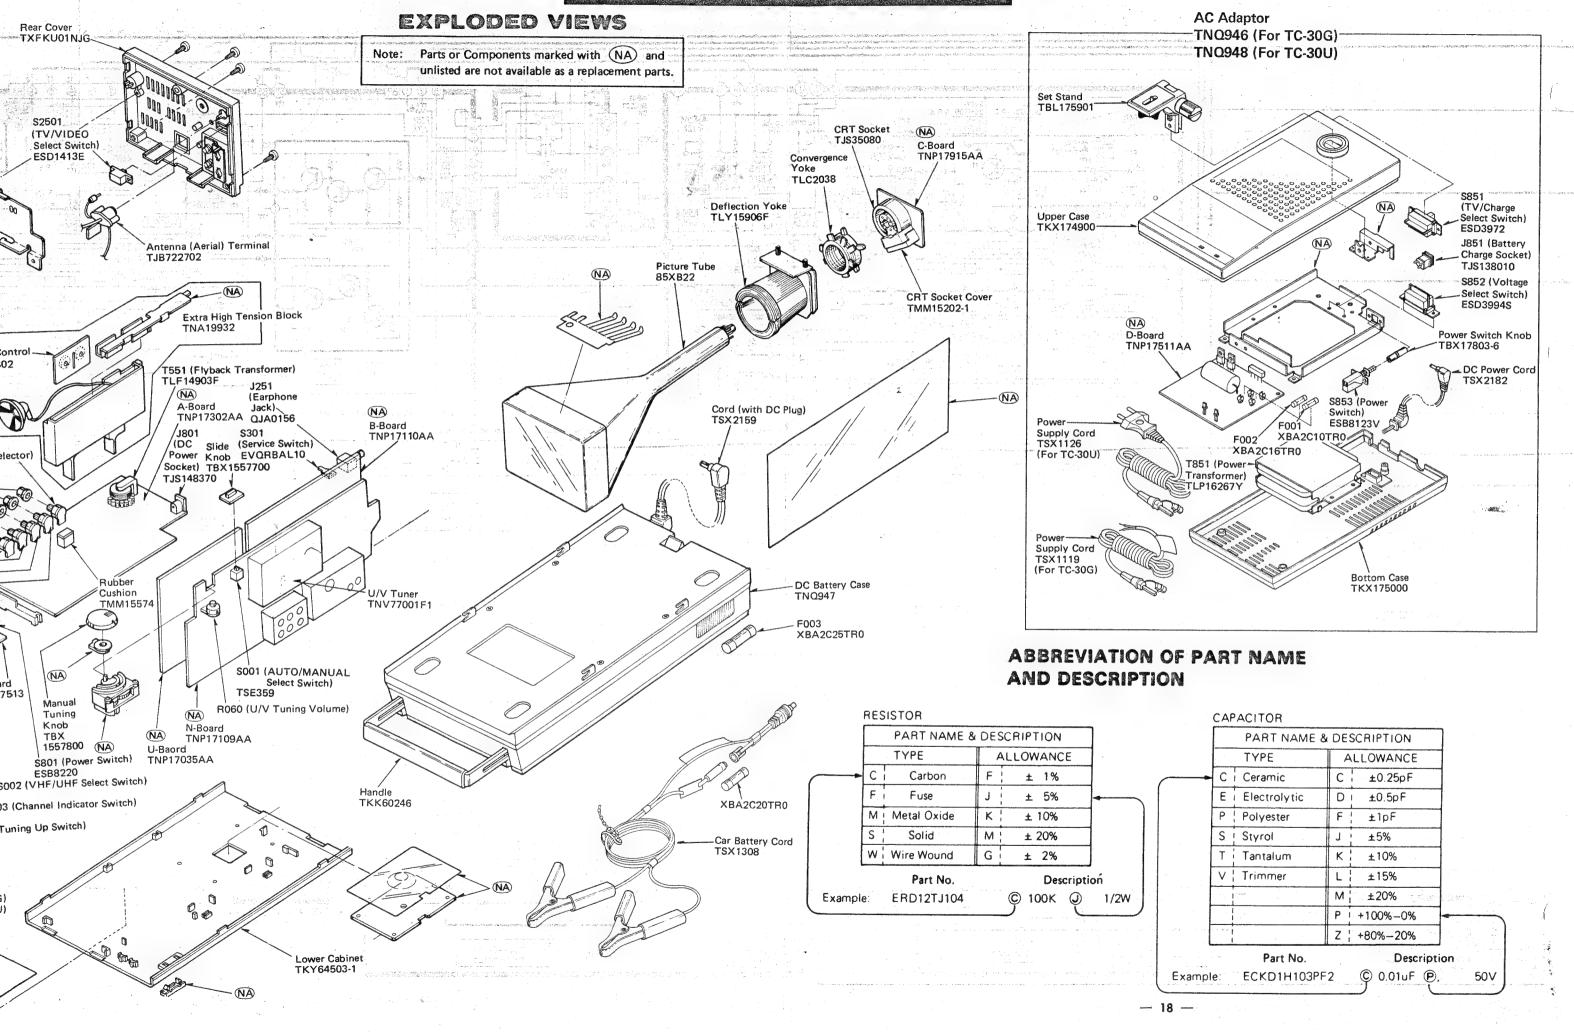

Important safety notice

Components identified by  $\Delta$  mark have special characteristics important for safety. When replacing any of these components, use only manufacturer's specified.

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
	RESISTORS		2017		
	11231310113		R047	ERJ8GCJ152	C 1.5KOHM, J,1/8W
R001	ERJ8GCJ332	C 7 7 7 7 7 7 1 4 4 7 1 1	R048	ERJ8GCJ223	C 22KOHM, J,1/8W
R002	ERJ8GCJ681	C 3.3KOHM, J,1/8W	R049	ERJ8GCJ333	C 33KOHM, J,1/8W
R003		C 6800HM, J,1/8W	R051	ERJ8GCJ101	C 1000HM, J,1/8W
	ERJ8GCJ124	C 120KOHM, J,1/8W	R052	ERJ8GCJ103	C 10KOHM, J,1/8W
R004	ERJ8GCJ684	C 680KOHM, J,1/8W			
R005	ERJ8GCJ184	C 180KOHM, J,1/8W	R053	ERJ8GCJ473	C 47KOHM, J,1/8W
				ERJ8GCJ101	C 1000HM, J,1/8W
R006	ERD25TJ103	C 10KOHM, J, 1/4W	R055	ERJ8GCJ101	C 1000HM, J,1/8W
R007	ERJ8GCJ682	C 6.8KOHM, J,1/8W	R056	ERJ8GCJ334	C 330KOHM, J,1/8W
R008	ERD25TJ333	C 33KOHM, J,1/4W	R057	ERJ8GCJ102	C 1KOHM, J,1/8W
R009	ERJ8GCJ184	C 180KOHM, J,1/8W			·
R010	ERJ8GCJ682	C 6.8KOHM, J,1/8W	R058	ERJ8GCJ105	C 1MOHM, J,1/8W
				ERJ8GCJ183	C 18KOHM, J,1/8W
R011	ERJ8GCJ104	C 100KOHM, J,1/8W			
R012	ERJ8GCJ104	C 100KDHM, J,1/8W	1	ERJ8GCJ272	
R013	ERJ8GCJ104	C 100KOHM, J,1/8W		1	C 2.7KOHM, J,1/8W
R014	ERJ8GCJ683	C 68KOHM, J,1/8W	R062	ERJ8GCJ102	C. 1KOHM, J,1/8W
R015	ERJ8GCJ224		5047		
R016	ERJ8GCJ224	C 220KOHM, J,1/8W			C 56KOHM, J,1/8W
R017		C 220KOHM, J,1/8W			C 6.8KOHM, J,1/8W
	ERJ8GCJ684	C 680KOHM, J,1/8W	1	ERJ8GCJ682	C 6.8KOHM, J,1/8W
R018	ERJ8GC182	C 1.8KOHM, J, 1/8W	R066	ERJ8GCJ121	C 1200HM, J,1/8W
	ERJ8GCJ224	C 220KOHM, J,1/8W	R067	ERJ8GCJ101	C 1000HM, J,1/8W
	EVN64AAOOB15	CONTROL 100KOHMB		NOT 25 1 1	15 005.153
R021	ERJ8GCJ103	C 10KOHM, J,1/8W	R068	ERJ8GCJ101	C 1000HM, J,1/8W
The section of the se	A compared to the property of the second sec	and the same way that grantees arrangement of the first o			C 1KOHM2 J21/8W
'R023	ERJ8GCJ683	C 68KOHM, J,1/8W			
	ERJ8GCJ223	C 22KOHM, J,1/8W	I		
R025	ERJ8GCJ102	C = 1KOHM, J,1/8W			C 56KOHM, J,1/8W
	ERJ8GCJ101	C 1000HM, J,1/8W	1072	EK300C3103	C 10KOHM, J,1/8W
	ERJ8GCJ223	C 22KOHM, J,1/8W	0077	FD 1000 1007	en de la companya de La companya de la co
51	KAMONET OF	CERTOOPPER GEEN			22KOHM, J,1/8W
1	ERJ8GCJ223	1			10KOHM/ J/1/8W
		C 22KOHM, J.1/8W			470HM/ J/1/8W
	ERJ8GCJ103	C 10KOHM, J,1/8W		ERJ8GCJ331	3300HM/ J,1/8W
	ERJ8GCJ184			ERJ8GCJ331 (	3300HM/ J/1/8W
	ERJ8GCJ104	C 100KOHM2 J21/8W	WS)[x	AREA MILLA DI	27-40-56:52 102 16
	ERJ8GCJ182	C 1.8KOHM; J,1/8W	₩ R078 E	ERJ8GCJ333	33KOHM/ J/1/8W
	*NHCXEE D	13010000.80 1001			33KOHM, J,1/8W
	ERJ8GCJ183			RJ8GCJ473	
		CONTROL 10KOHMB		RJ8GCJ333	
R037	ERJ8GCJ123	1			150KOHM/ J/1/8W
		1 - 1	WS NO.		ava lossias isens
		1 11			
	·				390KOHM, J,1/8W
					56KOHM, J,1/8W
		la		RJ8GCJ563	56KOHM, J,1/8W
				RD25TJ105	1MOHM, J,1/4W
		C 15KOHM J J 1/8W	R088 E	RJ8GCJ563	56KOHM, J,1/8W
			, ·	AHROMET IN THE	Bacuseause, tens
				RJ8GCJ822	8.2KOHM, J,1/8W
	10140098 5		R090 E	RJ8GCJ331 C	3300HM, J,1/8W
	RJ8GCJ472	C 4.7KOHM, J,1/8W			12KOHM2 J21/8W
R046 E		C 1.5KOHM, J,1/8W		RJ8GCJ273 C	
	,			0	CINCIPAL OF LACE

	A10.0%	ับ อภิสกรรณอสกับ ของกุลของสุดเกล เอโลย	garavad arai	ents, εδεπητίες by Δ m	Compon
Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
R093 R094 R095 R096 R097	ERJ8GCJ181 EVN64AA00B34 ERJ8GCJ333 ERJ8GCJ183 ERJ8GCJ331	C 1800HM, J,1/8W CONTROL 30KOHMB C 33KOHM, J,1/8W C 18KOHM, J,1/8W C 3300HM, J,1/8W	R160 R161 R162 R163	ERJ8GCJ223 ERJ8GCJ184 ERJ8GCJ563 ERJ8GCJ102 ERD25TJ122	C 22KOHM, J,1/8W C 180KOHM, J,1/8W C 356KOHM, J,1/8W C 1KOHM, J,1/8W C 1.2KOHM, J,1/4W
R098 R099 R100 R101 R102	ERJ8GCJ103 ERJ8GCJ333 EVN38CA00B54 ERJ8GCJ102 ERJ8GCJ391	C 10KOHM, J,1/8W C 33KOHM, J,1/8W CONTROL 50KOHMB C 1KOHM, J,1/8W C 3900HM, J,1/8W	R165 R201 R202 R204 R205	ERJ8GCJ472 ERJ8GCJ472 ERJ8GCJ822 ERJ8GCJ563 ERJ8GCJ392	330338673 SOON C34.7KOHMA JA1/8W C34.7KOHMA JA1/8W C34.2KOHMA JA1/8W C 56KOHMA JA1/8W C 3.9KOHMA JA1/8W
R105	ERJ8GCJ820 ERJ8GCJ183 ERJ8GCJ182 ERJ8GCJ332 EVN38CAOOB53	C 820HM, J,1/8W C 18KOHM, J,1/8W C 1.8KOHM, J,1/8W C 3.3KOHM, J,1/8W CONTROL 5KOHMB	R206 R207 R209 R210 R211	ERJ8GCJ471 ERJ8GCJ273 ERJ8GCJ332 ERJ8GCJ272 ERJ8GCJ103	CEC4700HM2 J21/8W CEC4700HM2 J21/8W CE3.3K0HM2 J21/8W CE3.3K0HM2 J21/8W CE2.7K0HM2 J21/8W CEC10K0HM2 J21/8W
R109 R110 R111	ERJ8GCJ682 ERJ8GCJ332 ERJ8GCJ103 ERJ8GCJ682 ERJ8GCJ821	C 6.8KOHM, J,1/8W C 3.3KOHM, J,1/8W C 10KOHM, J,1/8W C 6.8KOHM, J,1/8W C 820OHM, J,1/8W	R213 R215 R216	ERJ8GCJ472 ERJ8GCJ472 ERJ8GCJ472 ERD25TJ104 ERJ8GCJ273	C 4.7KOHM, J,1/8W C 4.7KOHM, J,1/8W C 4.7KOHM, J,1/8W C 100KOHM, J,1/4W C 27KOHM, J,1/8W
R115 R116 R117	ERJ8GCJ333 ERJ8GCJ393 ERJ8GCJ123 ERJ8GCJ331 ERJ8GCJ103	C 33KOHM, J,1/8W C 39KOHM, J,1/8W C 12KOHM, J,1/8W C 330OHM, J,1/8W C 10KOHM, J,1/8W	R253 R254 ▲ R255	ERJ8GCJ221 ERJ8GCJ223 ERJ8GCJ333 ERQ12HJ390 ERJ8GCJ560	C 2200HM, J,1/8W C 22K0HM, J,1/8W C 33K0HM, J,1/8W F 390HM, J,1/2W C 560HM, J,1/8W
R120 R121 R122 R123 R124	ERJ8GCJ273 EVN38CA00B54 ERJ8GCJ103 ERJ8GCJ102 ERJ8GCJ153 ERJ8GCJ223	C 27KOHM, J,1/8W CONTROL 50KOHMB C 10KOHM, J,1/8W C 1KOHM, J,1/8W C 15KOHM, J,1/8W C 22KOHM, J,1/8W	R258 R259 R260 R301	ERJ8GCJ472 ERJ8GCJ333 ERJ8GCJ153 ERJ8GCJ271	CONTROL 10K0HMC C 4.7K0HM, J,1/8W C 33K0HM, J,1/8W C 15K0HM, J,1/8W C 2700HM, J,1/8W
R126 R127 R128 R129 R130	ERD25TJ274 ERD25TJ274	C 22KOHM, J,1/8W C 4.7KOHM, J,1/8W C 22KOHM, J,1/8W C 22KOHM, J,1/8W C 270KOHM, J, 1/4W C 270KOHM, J, 1/4W S 6.8MOHM, K,1/2W	R303 R304 R305 R306	ERJ8GCJ222 ERJ8GCJ393 ERJ8GCJ333 ERJ8GCJ331	C 1KOHM, J,1/8W C 2.2KOHM, J,1/8W C 39KOHM, J,1/8W C 33KOHM, J,1/8W C 33OOHM, J,1/8W
R151 R152 R153 R154 R155	ERJ8GCJ273 ERJ8GCJ432 ERJ8GCJ124 ERJ8GCJ333 ERJ8GCJ104	C 27KOHM, J,1/8W C 4.3KOHM, J,1/8W C 120KOHM, J,1/8W C 33KOHM, J,1/8W C 100KOHM, J,1/8W C 22KOHM, J,1/8W	R308 R321 R322 R323	ERJ8GCJ103 EVN64AA00B33 ERJ8GCJ561 ERJ8GCJ821	C 1800HM, J,1/8W C 10K0HM, J,1/8W CONTROL 3K0HMB C 5600HM, J,1/8W C 8200HM, J,1/8W
R157 R158	ERJ8GCJ563 ERJ8GCJ154	C 56KOHM, J,1/8W C 150KOHM, J,1/8W C 56KOHM, J,1/8W	R325 E	ERJ8GCJ124 ( ERJ8GCJ332 (	C 10KOHM, J,1/8W C 120KOHM, J,1/8W C 3.3KOHM, J,1/8W C 5600HM, J,1/8W

ı				<del></del>	•	
	Ref. No	Part No.	Description :	Ref. No.	Part No.	Description
	R328		CONTROL 100KOHMB	R417	ERJ8GCJ683	C 68KOHM, J,1/8W
	R329		C 15KOHM, J,1/8W	1	ERJ8GCJ102	C 1KOHM, J,1/8W
١	R330		C 5600HM, J,1/8W		ERJ8GCJ391	C 3900HM, J,1/8W
	R331		C 10KDHM, J,1/8W		ERJ8GCJ8R2	C 8.20HM, J,1/8W
	△ R333	ERQ14AJ100P	F 100HM, J,1/4W	R433	ERJ8GCJ331	C 3300HM, J,1/8W
	0775	ED 1000 1400				
	R335 R337		C 6.8KOHM, J,1/8W	1 1	ERJ8GCJ103	C 10KOHM, J,1/8W
	R338		C 5600HM, J,1/8W	: I	ERD25TJ682	C 6.8KOHM, J,1/4W
	R339		C 1000HM, J,1/8W		ERD25TJ682	C 6.8KOHM, J, 1/4W
	R340		C 1000HM, J,1/8W C 8.2KOHM, J,1/8W		ERJ8GCJ183	C 18KOHM, J,1/8W
	11.540	LK0000002	C 8.2KORM/ 3/1/8W			C 2.4KOHM, J,1/4W
ı	R341	ERJ8GCJ392	C 3.9KOHM, J,1/8W	1		C 3.3KOHM, J,1/8W CONTROL 1KOHMB
	R342		CONTROL 10KOHMB		ERD25FJ101	CONTROL 1KOHMB C 1000HM, J,1/4W
	R343	ERJ8GCJ392	C 3.9KOHM, J,1/8W	1	ERD25TJ103	C 1000HM, J,1/4W
	R344	ERJ8GCJ123	C 12KOHM, J,1/8W		· ·	C 820HM, J,1/2W
ı	R345	EVJ3KA303B13	CONTROL 1KOHMB			C 1800HM, J,1/8W
1	R351	ERJ8GCJ272	C 2.7KOHM, J,1/8W	R518	ERJ8GCJ563	C 56KOHM, J,1/8W
	R352		CONTROL 10KOHMB		ERJ8GCJ223	C 22KOHM, J,1/8W
	R353		C 2.7KOHM, J,1/8W			C 10KOHM, J,1/8W
	R354	r I	CONTROL 10KOHMB			CONTROL 10KOHMB
ZA: 1681	R355	ERJ8GCJ272	C 2.7KOHM, J,1/8W	R522	ERJ8GCJ221	C 2200HM, J,1/8W
I	RZSK	EVN64AAOOB14	CONTROL 10KOHMB			
	R357	1			ERD25TJ101	C 1000HM2 J21/4W
	R358		CONTROL 1KOHMB			W 0.470HM, 1/2W
	R-359				ERJ8GCJ223 ERQ14AJ101P	22KOHM, J,1/8W
ı	R360		C 15KOHM, J,1/4W			1000HM, J,1/4W
				וכככוו	- K20000105	1KOHM, J,1/8W
	R361	ERD25FJ153	C 15KOHM, J,1/4W	R562	ERW12PKR33	V 0.330HM, K,1/2W
	R362	ERD25FJ153	C 15KOHM, J,1/4W			5600HM, J.1/8W
	R363		C 2.7KOHM, J,1/8W			1KOHM, J,1/8W
	R364		C 2.7KOHM, J,1/8W	₩ R605 E	ERJ8GCJ332	3.3KOHM 1.1/8W
		ERJ8GCJ272	C 2.7KOHM, J,1/8W	E R606 E	EVJ3KA303B14 (	ONTROL A 10KOHMB
	FES 40	N#350   G, Ed.	gerghawaag bara.			
		ERJ8GCJ122			RJ8GCJ222	2.2KOHM/ J/1/8W
	R401		C 1.2KOHM, J,1/8W			SLATER GUND FLRE
			C 680HM2 J,1/8W		VN64AAOOB14	
	R403	1	C: 3300HM2 J21/8W C: 390KOHM2 J21/8W			8.2KOHM/ J/1/8W
l		21100000374	11			ONTROL 50KOHMB
1	R405	ERJ8GCJ393	39KOHM2 J21/8W	D413 E		Gréigh agus i coo
			1000HM2 J21/4W	R614 E		150KOHM, J,1/8W
			CONTROL 10KOHMB	R615 F		1.5KOHM J J 1/8W
			8.2KOHM, J,1/8W	R616 F	R.18GC.1123	12KOHM/ J/1/8W
			8.2KOHM, J,1/8W			5.6KOHM, J,1/8W
						COOT ESTATION
1	R411		CONTROL 2220KOHMB			8.2KOHM, J,1/8W
			4.7KOHM/ J/1/8W			4700HM, J,1/8W
			2.2KOHM/ J/1/4W	R621 E	RJ8GCJ122 C	1.2KOHM, J,1/8W
	K414	ERJ8GCJ183	18KOHM, J,1/8W	R622 E		150KOHM, J,1/8W
L						

Ref. No.	Part No.	Description 3 (6.1)	Ref. No.	Part No.	Description 3 335
-{R623	ERD25TJ335	C 3.3MOHM/ J/1/4W	S-C013	ECKF1H103ZF	C 000 -01 UF Z Z Z Z 50V
4	ERJ8GCJ391	C 3900HM, J,1/8W		ECKF1H102KB	C 3 1000PF, K, 50V
	ERJ8GCJ391	C 3900HM, J,1/8W		ECEA1ES4R7	E 5814.7UF . 08825V
	ERJ8GCJ391	C 3900HM, J,1/8W		ECKF1H103ZF	C 0.01UF . Z . 50V
R630	ERJ8GCJ101	C 21000HM/ J/1/8W		ECUX1E223KBM	C 22000PF K 225V
7030	LNUUGGOOTOT				
R804	EVN64AAOOB13	CONTROL: GB: 1KOHMB		ECUX1E223KBM	C 22000PF, K, 25V
R809	EVN64AAOOB14	CONTROL GARTOKOHMB		ECEA1CS100	E 38 5010UF 7 TEE16V
R810		C 10K0HM/ J/1/8W		ECEA1VS470	E 33 0347UF / 80335V
R811	ERJ8GCJ153	C.3 15KOHM/ J/1/8W	i .	ECUX1H103MBM	C 0.0.01UF/ M/ 50V
R812	ERJ8GCJ332	C/3.3KOHM/ J/1/8W	C022	ECUX1H104ZF	C. 18 0.10F. Z. 50V
10050	LARGUELE SI	C 2700HM, J,1/2W	5000	ECUX1E221KBM	C 981220PF7 K7 25V
: R852	ERD50TJ271 © ERD25TJ103	C 10KOHM, J,1/4W			C 0.01UF, M. 50V
R853	ERD25TJ4R7	C 4.70HM, J,1/4W			C 0.01UF, M, 50V
R854	ERD25TJ562			ECSF16E10Y	TIS 1 5/10 UF 2 2 2/16V
R855 R856	ERD25TJ562	C 5.6KOHM, J,1/4W		ECEA1CS100	E 505 100F2 3 416V
K836	EKU2513562	C 3.0KUMM/ 3/1/4W	6028	ECENICSIO	
R857	ERD25TJ272	C 2.7KOHM, J,1/4W	C029	ECEA1CS100	E 10UF, 16V
R858	EVN38CAOOB23	CONTROL 2KOHMB	C030	ECEA1HS2R2	E 2.2UF, 50V
R859	ERD25TJ472	C 4.7KOHM, J,1/4W	C031	ECEA16Z47	E 47UF, 16V
R860	ERD25TJ821	C-8200HM, J,1/4W	C032	ECEATAS330	E33UF7 10V
R861	ERD25TJ470	C 470HM, J,1/4W	C033	ECUX1H104ZF	C 30.1UF Z Z 50V
			C034	ECKF1H102KB	C 1000PF, K, 50V
R862	ERD25TJ470	C 470HM, J,1/4W		ECUX1H104ZF	C 0.1UF, Z, 50V
R863	ERD25TJ563	C - 56KDHM, J,1/4W		ECEA1VS100	E 10UF, 35V
R864	ERD25TJ471	C 4700HM, J,1/4W	C037	ECUX1H104ZF	C 0.1UF, Z, 50V
R865	ERD25TJ222	C 2.2KOHM, J,1/4W	C038	ECUX1H104ZF	C 0.1UF, Z, 50V
R866	EVN38CAOOB13	CONTROL 1KOHMB	C039	ECEA1HSR47	E 0.47UF, 50V
			C040	ECEA1HSR47	E 0.47UF, 50V
R867	ERD25TJ302	C 3KOHM, J,1/4W	C101		C 8PF, D, 25V
R868	ERD25TJ202	C 2KOHM, J,1/4W	C103		C 0.01UF, M, 50V
R869	ERD25TJ103	C 10K0HM, J,1/4W	C104		E 0.68UF, 50V
R870	ERD25TJ511	C 5100HM, J,1/4W	C105	ECQM1H122KZ	P 1200PF, K, 50V
R871	EVN38CAOOB13	CONTROL 1KOHMB		ECUX1H103MBM	
			1		
		C 5100HM, J,1/4W			C 0.01UF, M, 50V
R873	ERD25TJ472	C 4.7KOHM, J,1/4W		ECUX1H103MBM	C 0.01UF, M, 50V
					C 1000PF, M, 50V
	CAPACITORS			ECUX1H103MBM	C 0.01UF, M, 50V
0004	ECHVARIA DA 114	C 400DE 1 354	E	ECEA16Z100	E 100UF, 16V
	1	C 100PF, J, 25V		ECUX1H103MBM	C 0.01UF, M, 50V
C002	ECKF1H103ZF	C 0.01UF, Z, 50V C 1000PF, M, 50V		ECUX1H121JM	C 120PF, J, 50V
0003			11	1	C 0.01UF, M, 50V
	ECUX1H103MBM			ECEA1ES4R7	E 4.7UF, 25V
6006	ECUX1H47OJCM	4/PF/ J/ 30V		ECSF16E22Y	T 22UF, 16V
C007	ECUX1H101JM	C 100PF, J, 25V			
C008	ECUX1H104ZF	C 0.1UF, Z, 50V	C126		C 56PF2 J2 50V
	ECUX1H272MBM	C 2700PF, M, 50V	C127	ECUX1H101JM	C. 100PF, J, 25V
C011		C 82PF, J, 50V		ECEA1CS100	E. 100F. 1146V
C012	ECUX1H222MBM	C 2200PF, M, 50V	C129	ECUX1H560JM	C. 50 56PF/ J/ 50V

Ref. No.	ronc Part No.	lon : Description於 36名	Ref. No.	rema Part No.	Description
C202 C203 C205	ECUX1H101JM ECUX1H470JCM ECQV05473JZ ECEA1CS100 ECUX1H150JCM	C 100PF, J, 25V C 47PF, J, 50V P 0.047UF, J, 50V E 10UF, 16V C 15PF, J, 50V	C406 C407 C409 C411 C412	ECSF16E3R3Y ECEA1CS330 ECEA25Z10 ECEA1ASS102 ECEA1CS470	T 3.3UF, 16V E 33UF, 16V E 10UF, 25V E 1000UF, 10V E 47UF, 16V
C208 C210 C211 C212 C213	ECEA1CS100	E 10UF, 16V P 0.022UF, J, 50V E 10UF, 16V E 47UF, 10V C 1000PF, M, 50V	C413 C414 C415 C501 C502	ECEA1CS101 ECSZ16EF3R3N ECEA1CSS331 ECQM1H103KV ECQV05104JZ	E 100UF, 16V T 3.3UF, 16V E 330UF, 16V P 0.01UF, K, 50V P 0.1UF, J, 50V
C214 C215 C251 C252 C253	ECUX1H102MBM ECUX1H102MBM ECEA1HS010 ECUX1H102MBM ECEA1CS100	C 1000PF, M, 50V C 1000PF, M, 50V E 1UF, 50V C 1000PF, M, 50V E 10UF, 16V	C503 C504 C505 C506 C507	ECEA1HS2R2 ECQM1H562KZ ECQF6222JZ	P 3900PF, K, 50V E 2.2UF, 50V P 5600PF, K, 50V P 2200PF, J,630V E 100UF, 16V
C254 C255 C256 C257 C258	ECEA1AS470	E 330UF, 16V E 220UF, 16V E 47UF, 10V P 0.1UF, J, 50V C 4700PF, M, 50V	C510 C511 C512	· ·	C 330PF, K, 25V C 68PF, J, 50V C 1000PF, K, 50V
C311	ECEAOJN33OS ECUX1H331KM ECEAOJS471 ECUX1H1O3MBM ECEA1CS1OO	E 33UF, 6.3V C 330PF, K, 50V E 470UF, 6.3V	C551 C552 C553 C554	ECQF4103KZ ECQF4103KZ ECQF4103KZ ECEA25W4R7Q	P 0.01UF, K,400V P 0.01UF, K,400V P 0.01UF, K,400V E 4.7UF, 25V E 330UF, 16V
C323 C324 C325	ECEA1CSS102 ECUX1H330JCM	E 1UF, 50V C 222PF, J, 50V E 0.15UF, 50V E 1000UF, 55016V	C557 C558	ECEA1HS010 ECEA2AS2R2	E 470UF, 16V E 3 4.7UF, 3 160V E 3 2.2UF, 3 100V P 0.33UF, J, 50V
C329 C351 C352	ECUX1H560JCM ECUX1H181JM	E	C602 C603 C604	DO DMIXABS	C 90 100PF / J / 50V
C355	ECEA1HS2R2	C ° 150PF M M (4K) E 10UF 16\	C605 UCC606 UCC608 UCC608	ECQM1H273KZ ECUX1E221KBN ECUX1H103MBN ECUX1H390JCN ECUX1H470JCN	1 C 9 9 3 39 PF 7 J 2 50 V
C 4 0 4	ECEA1CS100 ECEA1ASS102 ECQM1H183KV	C 1000PF2 K2 50 E 10UF2 E0516 E 1000UF2 10 P 0.018UF2 K2 50	C61	ECEA1HSR47 ECUX1H272KBN ECEA50ZR15 ECQM1H822KZ	E 0.47UF, 50V C 2700PF, K, 50V E 0.15UF, 50V P 8200PF, K, 50V

		.edd: Description 제 .tes	Ref. No.	Part No.	.old :Description ੀ .ਜਿਸੀ
C616	ECEA1HNO10S	ESESSIBLE SOASOV	/2T103	TL1157760	VIDEO MIFOTRANS 2
		C 0.01UF, M. 50V			
	ECUX1H331KM	C 330PF, K, 50V			AUDIODIFOTRANS.
7 4 9	ECUX1H331KM	C 2330PF, K, 50V			H-DRIVE TRANSSO
	ECUX1H331KM	C 3 2330PF / K / 50V	1		FLYBACK TRANS
् <u>्</u> ८७21	ECOVIDOSIVA	C 3230FF	△ T851	TLP16267Y	POWER TRANS.
C422	ECEA1CSS100	Engaloue Children	}		COTESTARS BOST
		E 3 2 2 3 1 0 U F / E 1 2 1 6 V			
		E 2 1000UF 2 31325V			C210 ECOVOS2233
	ECEA1ASS471	ECSA470UFA SHA10V	tar		CAN ECEANOSTOR
	ECEA1ESS330			· ·	ZENER DIODE 3750
C805	ECEAOJS101	E . 100UF . 5.6.3V			CSUSPECHNUSCOIC
				MA151A	DIODE
	ECEA1HS2R2	E 00 22.2UF / 00 750V			C214 ECBYTBOOID
C807	ECEA1AS470	E 2 2 - 47UF			DIODE & CADA GUSS
C851	ECQM1H1O2MZ	P.3 1000PF2 M2 350V	SCV	RASE B	CREAT SCEATHSOND
	ECQM1H1O2MZ	P 1000PF, M, 50V		MA151A 0 3	DIODECKEDS SESO
	ECQM1H1O2MZ	P 1000PF, M. 50V			DIODE PAROE TESSO
			1	MA151A	DIODE
C854 <sup>2</sup>	ECQM1H1O2MZ	P 1000PF, M, 50V		MA151WA	DIODE
	ECEB1E472	E 4700UF, 25V		MA151A	DIODE
		P 0.01UF, J, 50V	5010		okaja medan besa
1	ECQV05223JZ		0011		DIODE
1	1	)	1		
6838	ECQV05333JZ	P 0.033UF, J, 50V		MA151WA	DIODE AUGE, 8880
2050				MA151WK	DIODE
6859	ECQM1H1O2MZ	P 1000PF, M, 50V		MA28B	DIODE
			D015	MA151A 0	DIODE
△ C860	ECQE2A223MW	P 0.022UF, 1KV	· ; , " - 2		HOWER VARIOUS DAES
				MA151K	DIODE
ĺ	COILS		D018	MA151K	DIODE
			D019	TVSQA210M	ZENER DIODE
L001	TLT047L107G	PEAKING COIL 4.7U	D020	MA151K	DIODE
L101	TLQR68J205C	PEAKING COIL 0.68U	D021	MA1082L	ZENER DIODE
	TL1151051	VIDEO IF TRANS.		1 34	
	TLT100K991K	PEAKING COIL 10U	0022	TVSQAZ11M	ZENER DIODE
1	TLT150K991K	PEAKING COIL 15U		l .	DIODE (LED)
2.00	T TO	LANTING COLL 130			DIODE (LED)
1151	TLT047L107G	PEAKING COIL 4.7U			DIODE
	TLT047L107G		1	1	
1	1	PEAKING COIL 4.7U	0020	MA28WA	DIODE
	TLK150870	DELAY LINE	222	TUOFBUETO	
1	TLT470K991K	PEAKING COIL 47U	1	l .	DIODE (LED)
L551	TSC911	BEAD CHOKE		1	DIODE (LED)
,			1		ZENER DIODE
	TLH15605P	LINEARITY COIL		MA151K	DIODE
1	TLT331K991K	PEAKING COIL 330U	1	MA151K	DIODE
L601	TLT120K991K	PEAKING COIL 12U			
L602	TLT120K991K	PEAKING COIL 12U	D033	MA151K	DIODE
	TLT512J166C	PEAKING COIL 5.1M	1		DIODE
				1	DIODE
	TRANSFOMERS		1		DIODE : 3/201; 30+0
				MA150	DIODE - 33 30 - 3
T101	TLI158756	HELICAL TRANS.	0203		0404 18081 4040
	TL1153757	VIDEO IF TRANS.		i .	DIODE MODE 30A0
1,1,102	LT   33/3/	ATREA TE LEWING.	0301	MICIUM	DIUDE TO WATER A MA

	Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
	D405	MA151K	DIODE	0009	2SD601-R	INDICATOR (UHF)
1		MA1120L	ZENER DIODE	0010	2SD601A-R	U/V SELECT SWITCHING
	D551	TVSB4404	DIODE	Q011	2SJ84A-R	BAND SWITCHING (FET)
				(	2SD601A-R	BT BUTTER
	D553	TVSB4302	DIODE	Q013	2SD601-R	SYNC DET.
	D554	MA152K	DIODE			
	D555	MA152K	DIODE	Q014	2SD601A-R	BS SWITCHING DET.
İ	D601	MA151K	DIODE		2SD601A-R	BS SWITCHING
	D807	MA151K	DIODE	1	2SD601A-R	BS SWITCHING
		TVSQA206M	ZENER DIODE	0017	2SD637-R	BT GAIN SWITCHING
	D809	TVSA81004	DIODE	0018	2SD601A-R	BT AMP,
ł	D851	TVSRB151	DIODE			
	D855	TVSROZZ	DIODE	Q019	2SB642-S	BTOUT
	D856	MA27	DIODE	0020	2SD601-R	LED DRIVE
				Q021	2SD636-R	AUTO RETURN (DOWN)
	D857	LN217RPH	DIODE			DET.
	D858	TVSRD6.2EB	ZENER DIODE	0022	2SD601-R	AUTO RETURN (DOWN)
		LN217RPH	DIODE	Q023	2SD601-R	AUTO RETURN (DOWN)
1		MA150	DIODE			
ı	D861	TVSRD2.2EB	ZENER DIODE	0024	2SD636-R	AUTO RETURN (UP) DET.
	200				2SD601-R	AUTO RETURN (UP)
		I.C		1	2SD601-R	TUNING HOLD
					2SD601-R	TUNING HOLD
	TC001%	TVSTC4011BP	BAR INDICATOR	Q101	2SD601-R	IMPEDANCE MATCHING
		TVSTC4011BP	TUNING UP/DOWN	~ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~		IVII ZDYNIOZ NIJY I GYMYO
	10001	ga kat samma ka ka mininga a ka	CONTROL	9201	2SD601-R	SOUND DEFEAT
1	IC003	TVSTC4001BP	TUNING UP/DOWN		2SD601-R	SOUND AMP.
1	a Tanga basansa	<ul> <li>(4) (本語・文化 setter (表・ )) できがくがらないできます。</li> </ul>	MEMORY	a committee and the same of th	2SD601-R	VIDEO
1	IC004	TVSTC4011BP	UP/DOWN RESET			VIDEO AMP.
	IC005	TVSTC4027BP	U/V SWITCHING CONTROL	ł.	2SB709-R	EMITTER FOLLOWER
		1 0 0 5 A M				7
1	IC007	TVSUPC574J	VOLTAGE REGULATOR	Q304	2SD601-R	COLOUR/CONTRAST CONT.
	IC101	AN5130	VIF/AFT/AGC DET.		2SD662-R	B-OUT
	IC201	AN5215	SIF/AM DET.		2SD662-R	G-OUT
	IC202	AN374P	AUDIO OUT	Q353		R-OUT
1	IC301	AN5615	VIDEO AMP		Had wastsMi	
		1 (53.44.02)	08.3887	Q404	2SD601-R	SYNC BUFFER
1	IC401	AN5435	V/H_OSC, V-DRIVE	1	2SB709-R	SYNC BUFFER
	IC601	AN5625	PAL CHROMA AMP.		2SD959LB	H-OUT
L		727.7.1023	TROUGHTLAND!		2SB943Q	VOL. CONTROL
1	÷	TRANSISTORS	E LE COMENT	Q851	2SB944P	PROTECTOR
	7	ATTERMOSE :	1 FEEL DEFEND		2 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	
	Q001	2SD601-R	CONSTANT CURRENT	Q852	2SC945K	AOCP
1		econgerica.	SOURCE	į.	2SC945K	AOCP CALL OF THE STATE OF THE S
	0005	2SB709A-R	BT CHARGE CONT.	1	2SB943Q	VOL. CONTROL
	0003	2SD601A-R	BT DISCHARGE CONT.	l .		ERROR DET.
	Q004	2SD601-R	SAW-TOOTH GENE.	14.5		
	Q005	2SD637-R	LED SWITCHING	Q856	2SC945K 7.5	AOCP. T. J. PRASTA
		SHOPSRAE	4-1 581382	Q857	2SA733K	PROTECTOR
		2SB709-R	BU SWITCHING			A Section of the sect
	Q007	2SB709-R	BV SWITCHING			
1	8009	2SD601-R 03	INDICATOR (VHF)		5005190004	250,00000

Ref. No.	Part No.	Description 3	Ref. No.	Part No.	Description
			Δ	TNH11501	ADDP/ERROR DET.
			-	TNH11701	VIDEO, PULSE-AMP
A CONTRACTOR	OTHERS			TNP17035AA	CIRCUIT BOARD U
6(3)14		ODEAKED SEE SEES	$\triangle$	TNP17036AA	CIRCUIT BOARD L
	EAS45P106SA	SPEAKER	Δ		
	EMCSO252M	2P CONNECTOR	Δ	TNP17037AA	CIRCUIT BOARD S
	EMCSO352M	3P CONNECTOR			
No. 177	EMCSO652M	6P-CONNECTOR	Δ	TNP17109AA	CIRCUIT BOARD N
Δ	ESB8213V	POWER SW. 1000 元子000	Δ	TNP17110AA	CIRCUIT BOARD B
		CHALLEST OF BARCO	Δ	TNP17302AA	CIRCUIT BOARD A
\$1941	ESD1413E	TV/VIDEO SELECT SW.	$\triangle$	TNP17513	CIRCUIT BOARD K
	ESD3972	TV/CHARGE SELECT SW.	Δ	TNP17514AA	CIRCUIT BOARD T
	ESD3994S	VOLTAGE SELECT SW.	$\triangle$	TNP17511AA	CIRCUIT BOARD D
	TBL175901	SET STAND	Δ	TNP17517AA	CIRCUIT BOARD P
Δ	TBM27074	MODEL NAME PLATE	Δ	TNP17915AA	CIRCUIT BOARD C
ZiX	101127074	FOR TC-30U		TNQ946	AC ADAPTOR FOR TC-30G
	4 1 2 1 2 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	1	<b>A</b>	TNQ947	BATTERY CASE
<b>A</b>	TBM37893	MODEL NAME PLATE	<b>A</b>	TNQ948	AC ADAPTOR FOR TC-30U
	TDWA 557400	FOR TC-30G	Δ	TNV77001F1	U/V TUNER
·	TBX1557600	VOLUME KNOB	Δ	· ·	1
	TBX1557700	SLIDE		TPC192901	OUTER CARTON FOR
. ·	TBX1557800	MANUAL KNOB		TDOLOGOO	TC-30G
	TBX1558000	SMALL KNOB		TPC192902	OUTER CARTON FOR
and the second second	TBX1587700	POWER SW BUTTON	ya gagi isangan kanadi diba ani kanada da	A CONTRACTOR OF THE PROPERTY O	TC-30U
	TBX1587800	U/V SELECT BUTTON		TPD191220	CUSHION (UPPER)
	TBX1587900	AUTO TUNE BUTTON		TPD192225	CUSHION (BOTTOM)
	TBX17803-6	POWER SWITCH KNOB		TQB610793	INSTRUCTION BOOK
. (	TES4520	SPRING			FOR TC-30G
	TES6570	SPRING		TQB610794	INSTRUCTION BOOK
	1230570	Jor King		A CONTROL OF STATE OF THE STATE	FOR TC-30U
	TJB722702	ANTENNA TERMINAL	Δ	TSA100004	ROD ANTENNA
	TJC6320	FUSE HOLDER	44	TSN63118	MAGNET
ar.		4P SHORT PLUG		TSX1119	POWER SUPPLY CORD
, The second sec	TJS168041		Δ	1271119	FOR TC-30G
	TJS35080	CRT SOCKET		TOVALO	POWER SUPPLY CORD
	TKE155000	ESCUTCHEON	Δ	TSX1126	The state of the s
	TKG179606	FRONT GLASS			FOR TC-30U
	TKK159396-2	INDICATOR BODY	Δ	TSX1308	CAR BATTERY CORD
			Δ	TSX2159	DC POWER CORD
	TKK159553-1	INDICATOR (BOX)	Δ	TSX2182	DC POWER CORD
	TKK60246	HANDLE		TXAJTO4NJG	CONNECTOR, A6S
	TKM61703	MASK		TXAJT12D93	CONNECTOR,
	TKX174900	UPPER CASE		TXAMCO1NJG	CONNECTOR, A6S
	TKX175000	BOTTOM CASE		TXAMC03D93	CONNECTOR
				TXAMCO3NJG	CONNECTOR, A6S
	TKY64403-1	CABINET (UPPER)		TXAMC04D93	CONNECTOR
	TKY64503-1	LOWER CABINET		TXAVJO1NJG	SELECT VR
	TLC2038	CONVERGENCE YOKE	ja ja	TXFKU01NJG	REAR COVER
A	TLY15906F	DEFLECTION YOKE		TXFKX01NJG	MAGNIFYING LENS
Δ		CRT SOCKET COVER	A	XBA2C2OTRO	FUSE 250V 2A
	TMM15202-1		Δ	XEH15B2-A	EARPHONE
	TMM15574	RUBBER CUSHION		1	PICTURE TUBE
Δ	TNA19932	H.V BLOCK	Δ	85XB22	
1	TNH11301	V-OUT H-DRIVE	11	TXAMCO2D93	CONNECTOR
Δ	TNH11302	FOCUS BLOCK	B3	TTV A ITADAAA	CONNECTOR

· ·

### TC-30G/TC-30U

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
B8 JK1	TXAMCO5D93 TXAJT10D93 TXAJTB8NJG TXAJT02D93 TXAMCO6D93	CONNECTOR CONNECTOR CONNECTOR, A6S CONNECTOR CONNECTOR			
N13 N14 N18	TXAJT01D93 TXAJT08D93 TXAJT09D93 TXAJTN18NJG XBA2C10TRO	CONNECTOR CONNECTOR CONNECTOR CONNECTOR, A6S FUSE 250V 1A			
△ F003 J251 △ J801 △ J851 S001	XBA2C16TRO XBA2C25TRO QJA0156 TJS148370 TJS138010 TSE359 EVQQJRO2K	FUSE 250V 1.6A FUSE 250V 2.5A EARPHONE JACK DC SOCKET CHARGE SOCKET AUTO/MANUAL SELECT SW U/V SELECT SW.			
S004 S005 S201	EVQQJRO2K EVQQJRO2K EVQQJRO2K EVQ74B3O3 EVQRBAL1O	CHANNEL INDICATOR SW. TUNING UP SW. TUNING DOWN SW. SOUND IF SELECTOR SW. SERVICE SW.	1.		
TH851 X101 X102	ESB8220 ERTD2FHL802S EFCS6ROMW3 EFCS5R5MW3 EFCS6ROMS3	POWER SW. THERMISTER 8KOHM TRAP CERAMIC TRAP SOUND FILTER		. Personal and another than the state of the	
•	EFCS5R5MS3 TSS116M1	CERAMIC FILTER CRYSTAL			